

WORKSHOP MANUAL
CABALLERO 250



Introduction

This manual was prepared by **Fantic Motor** for use by **Fantic Motor** dealers and their specialized personnel. It is assumed that those who use this documentation for repair and maintenance of **Fantic Motor** vehicles have a basic knowledge of the principles and mechanical procedures regarding vehicle repair techniques. In the absence of these notions, repair or maintenance may be inadequate or dangerous.

Fantic Motor is constantly committed in improving its production. Any significant modifications and changes introduced with regard to vehicle characteristics and repair procedures will be brought to the attention of all **Fantic Motor** dealers and will be published in future editions of the manual.

 **Fantic Motor reserves the right to modify and make changes, at any time and without notice, to the models described, specifications and design data, guaranteeing the essential characteristics described and illustrated in this manual.**

 **Operators have the obligation to read the manual and to scrupulously follow the instructions given. The manufacturer is not responsible for damages caused to people and/or things and is not responsible for damages to the product, if the instructions given in this manual are not observed.**

 **This publication, or part of it, cannot be reduced or translated without the Fantic Motor's approval. Reproduction of the contents used in this manual without the Manufacturer's permission is prohibited. Fantic Motor assumes no responsibility for printing errors and omissions. All rights reserved.**

Symbols used in the manual

Within this manual there will be technical warnings and annotations preceded by the following symbols according to the reference topic:

 **Warning regarding the procedure described and the specific safety rules: indicates procedures that must be followed to prevent damage to the vehicle or possible injuries to vehicle repairers.**

 **Information note on the procedure described and on the characteristics of the vehicle: it provides useful information to make the procedure easier and clearer.**

 **Tightening torque: note showing one or more tightening torques values referred to the procedure described.**

 **Measurement data: note showing the values of one or more measurements to be complied with or verified for the procedure described.**

 **Equipment: note that informs the user of the need to use particular tools for the procedure described.**

 **Consumable: note that illustrates the names, types and/or quantities of consumables (such as oil, fuel, sealants, additives, etc.) to be used for the procedure described.**

All left or right indications refer to the direction of travel of the motorcycle.

1 Safety rules	9
2 Maintenance rules	11
2.1 Maintenance	11
2.2 Preparation for interventions	11
3 Vehicle identification	12
4 Spare parts	13
4.1 Gaskets, oil seals and o-rings	13
4.2 Washers, plates and split pins	13
4.3 Bearings and oil seals	13
4.4 Retaining rings	13
5 Tightening Torques	14
5.1 Frame tightening torques	14
5.1.1 Sequences for tightening chassis parts	15
5.2 Engine tightening torques	17
5.3 Generic tightening torques	18
5.3.1 General specifications of the tightening torques	18
5.3.2 Conversion table	18
6 Technical Data	19
6.1 Frame technical data	19
6.2 Engine technical data	20
7 Products	22
8 Scheduled maintenance	23
9 Ordinary maintenance procedures	25
9.1 Engine oil level check	25
9.2 Coolant level check	25
9.3 Pads wear check	26
9.4 Check the front brake master cylinder oil level	26
9.5 Check the rear brake master cylinder oil level	26
9.6 Spark plug check	27
9.7 Front brake adjustment	27
9.8 Rear brake adjustment	27
9.9 Clutch lever clearance adjustment	28
9.10 Throttle cable adjustment	28
10 Electrical system and devices	29
10.1 Electrical system diagram	29
10.1.1 Cables colour coding	29
10.1.2 Key to wiring diagram colours	30
10.1.3 Key to abbreviations of the wiring diagram	30
10.1.4 Key to the wiring diagram components	31
10.1.5 Wiring diagram	33
10.2 Cable path	34
10.3 Devices and connectors	42
10.3.1 Key switch	43
10.3.2 Right light stalk	43

10.3.3	Horn	44
10.3.4	Radiator fan	44
10.3.5	Ignition coil	45
10.3.6	Spark plug	46
10.3.7	Water temperature sensor	47
10.3.8	MAP sensor	47
10.3.9	Neutral gear switch	48
10.3.10	TPS sensor	49
10.3.11	Pick-Up	49
10.3.12	Side kickstand switch	50
10.3.13	OBD diagnosis connector	51
10.3.14	Engine control unit	52
10.3.15	Rear ABS sensor	53
10.3.16	Right rear turn signal	54
10.3.17	Tail light	55
10.3.18	License plate light	56
10.3.19	Left rear turn signal	57
10.3.20	Rear brake light switch	58
10.3.21	Engine ground point	58
10.3.22	Battery negative terminal	59
10.3.23	Battery positive terminal	60
10.3.24	Starter remote control switch	61
10.3.25	Starter motor	62
10.3.26	Generator	63
10.3.27	Voltage regulator	64
10.3.28	Fuel level sensor	65
10.3.29	ABS module	66
10.3.30	ABS mode selection connector	67
10.3.31	Fuel injector	68
10.3.32	Left light stalk	69
10.3.33	Left light stalk - secondary connector	69
10.3.34	Fuse box	70
10.3.35	Front headlight	71
10.3.36	Left front turn signal	72
10.3.37	Right front turn signal	73
10.3.38	Dashboard	74
10.3.39	Dashboard - secondary connector	74
10.3.40	Fuel reserve indicator light	75
10.3.41	Front ABS sensor	75
10.3.42	Stepper motor	76
10.3.43	CDI control unit programming connector	77
10.3.44	Light remote control switch	78
10.3.45	Radiator fan remote control switch	78
10.3.46	Motor sensor remote control switch	79
10.3.47	Fuel pump	79
10.3.48	Oxygen sensor	80
10.4	Fuses and relays	81
10.5	Battery	82

10.5.1 Battery replacement	82
10.5.2 Notes on the battery	82
10.6 Ignition module	83
10.6.1 Ignition module removal	83
10.7 Dashboard	83
10.7.1 Dashboard removal	83
10.7.2 Dashboard settings	85
10.8 Ignition	94
10.8.1 Ignition coil removal	94
10.8.2 Spark plug removal	94
10.8.3 Voltage regulator removal	95
10.9 Light stalk	96
10.9.1 Left light stalk	96
10.9.2 Right light stalk	96
11 Diagnostics	97
11.1 Instruments diagnosis and connection socket	97
11.2 Error codes	98
11.2.1 Ignition module Error codes table	98
11.2.2 ABS module error code table	120
12 Frame	122
12.1 Seat removal	122
12.2 License plate holder removal	122
12.2.1 License plate holder removal (Scrambler version)	122
12.2.2 License plate holder removal (Flat Track version)	123
12.3 Rear tail removal	124
12.3.1 Rear tail removal (Scrambler version)	124
12.3.2 Rear tail removal (Flat Track version)	125
12.4 Passenger handles removal	126
12.5 Side panel removal	126
12.5.1 Left side panel removal	126
12.5.2 Right side panel removal	127
12.6 Air filter removal	127
12.6.1 Oil filter cleaning	127
12.7 Underbody and conveyors removal	127
12.7.1 Left conveyor removal	127
12.7.2 Right conveyor removal	127
12.8 Fuel tank removal	128
12.8.1 Cover removal	128
12.8.2 Complete tank removal	128
12.8.3 Fuel cap removal	129
12.8.4 Tank cover removal	129
12.8.5 Fuel pump removal	130
12.8.6 Fuel level indicator removal	130
12.9 Front mudguard and fork protectors removal	131
12.9.1 Front mudguard removal	131
12.9.2 Fork protectors removal	131
12.10 Rear mudguard removal	132

12.11 Suspensions removal	133
12.11.1 Swingarm removal	133
12.11.2 Swingarm overhaul	134
12.11.3 Swingarm oil change	138
12.11.4 Rear shock absorber removal	138
12.11.5 Linkage removal	140
12.12 Handlebar removal	140
12.12.1 Handlebar removal	140
12.12.2 Plates removal	140
12.12.3 Steering clearance check and adjustment	141
12.13 Swingarm removal	142
12.14 Chain removal	143
12.14.1 Chain removal	143
12.14.2 Chain clearance adjustment	143
12.14.3 Rim removal	144
12.14.4 Sprocket removal	144
12.14.5 Chain roller removal	144
12.15 Wheels and brake discs removal	145
12.15.1 Front wheel removal	145
12.15.2 Front brake disc removal	145
12.15.3 Rear wheel removal	145
12.15.4 Rear brake disc removal	145
12.15.5 Wheels bearings check	146
12.16 Footrests removal	147
12.16.1 Rider footrest removal	147
12.16.2 Passenger footrest removal	147
12.16.3 Frame plate for rider left pedal removal	147
12.16.4 Frame plate for rider right pedal removal	147
12.17 Kickstand removal	148
12.17.1 Kickstand sensor removal	148
12.18 Brake system removal	149
12.18.1 Brake pads removal	149
12.18.2 Front brake calliper removal	150
12.18.3 Rear brake calliper removal	150
12.18.4 Front brake lever removal	151
12.18.5 Rear brake lever removal	151
12.18.6 Front brake master cylinder removal	152
12.18.7 Rear brake master cylinder removal	152
12.18.8 Brake system draining	153
12.19 ABS system removal	154
12.19.1 ABS system hydraulic diagram	154
12.19.2 ABS module removal	155
12.19.3 Front ABS tubes removal	156
12.19.4 Rear ABS tubes removal	157
12.19.5 Front ABS sensor removal	158
12.19.6 Rear ABS sensor removal	159
12.19.7 Front ABS phonic wheel removal	159
12.19.8 Rear ABS phonic wheel removal	159

12.20 Exhaust system removal	160
12.20.1 Silencer removal	160
12.20.2 Oxygen sensor removal	160
12.21 Cooling system removal	161
12.21.1 Cooling system diagram	161
12.21.2 Radiator removal	161
12.21.3 Fan removal	162
12.21.4 Expansion tank removal	163
12.21.5 Thermostat	164
12.21.6 Thermostat check	165
12.21.7 Thermostat installation	165
12.22 Front optical unit removal	166
12.22.1 Front headlight removal	166
12.22.2 Front turn signals removal	167
12.22.3 Turn signal bulbs replacement	167
12.23 Rear optical unit removal	168
12.23.1 Rear headlight removal (Scrambler version)	168
12.23.2 Rear headlight removal (Flat Track version)	169
12.23.3 Rear turn signals removal	170
12.23.4 Rear turn signal bulbs replacement	170
12.25 Clutch lever removal	171
12.26 Rear-view mirrors removal	171
12.27 Throttle control removal	172
12.27.1 Throttle control knob removal	172
12.27.2 Throttle cables removal	172
13 Engine	173
13.1 Complete engine removal	173
13.2 Engine oil and engine oil filters change	175
13.3 Engine oil volume	176
13.4 Cylinder head and valve	177
13.4.1 Remove the cylinder head cover	177
13.4.2 Remove the cylinder head	177
13.4.3 Cylinder head cover dismantling	178
13.4.4 Disassemble the cylinder head	178
13.4.5 Inspect the valve and the valve spring	179
13.4.6 Inspect the rocker arm and the rocker arm shaft	179
13.4.7 Inspect the camshaft components	180
13.4.8 Inspect the cylinder head	180
13.4.9 Inspect and grind valve seat	180
13.4.10 Inspect valve guide	180
13.4.11 Measure the width of the contact surface of the valve seat	181
13.4.12 Assemble the cylinder head	181
13.4.13 Assemble the cylinder head cover	182
13.4.14 Install the cylinder head	182
13.4.15 Install cylinder head	183
13.4.16 Install the cylinder head cover	183
13.4.17 Tappet control and adjustment	184

13.5 Cylinder and piston	185
13.5.1 Remove cylinder	185
13.5.2 Inspect the cylinder block	185
13.5.3 Remove the piston	185
13.5.5 Install the piston rings	187
13.5.6 Install piston	187
13.5.7 Install the cylinder block	188
13.6 Clutch, drive wheel, free wheel, oil pump and gear shift	188
13.6.1 Remove the water pump impeller	188
13.6.2 Remove the crankcase cover on the right side of the engine.	188
13.6.3 Remove the water pump shaft, the water seal assembly and the oil seal	188
13.6.4 Remove the clutch	189
13.6.5 Remove the drive wheel, free wheel and starter gear	189
13.6.6 Remove the oil pump on the right side	189
13.6.7 Remove the double gear	189
13.6.8 Remove the starter motor	190
13.6.9 Remove the gear shift	190
13.6.10 Inspect the crankcase cover on the right side	190
13.6.11 Inspect the water pump shaft, the impeller, the water seal assembly and the oil seal	190
13.6.12 Inspect the starter shaft	191
13.6.13 Inspect the clutch spring	191
13.6.14 Inspect the clutch disc	192
13.6.15 Inspect the clutch housing	192
13.6.16 Inspect the drive wheel	193
13.6.17 Inspect the free wheel	193
13.6.18 Inspect the main starter gear	193
13.6.19 Inspect the oil pump on the right side of the engine housing	193
13.6.20 Inspect the starter motor and the double gear.	194
13.6.21 Inspect the gearshift	194
13.6.22 Assemble the starter shaft	194
13.6.23 Assemble the double gear	194
13.6.24 Assemble the gearshift	194
13.6.25 Assemble the oil pump on the right side of the engine housing	194
13.6.26 Assemble the free wheel	194
13.6.27 Install the main gear and the free wheel	194
13.6.28 Install the drive wheel	194
13.6.29 Install the clutch	195
13.6.30 Assemble the starter motor	195
13.6.31 Install the crankcase cover on the right side.	195
13.7 Generator, crankshaft balancing and driven wheel	196
13.7.1 Remove the crankcase cover on the left side	196
13.7.2 Remove the generator stator	196
13.7.3 Remove the generator rotor	196
13.7.4 Remove the balancing drive wheel and the driven wheel	196
13.7.5 Remove the oil pump on the left side	197
13.7.6 Inspect the crankcase cover on the left side	197
13.7.7 Inspect the generator rotor and the stator	197
13.7.8 Inspect the balancing drive wheel and the driven wheel	197

13.7.9 Inspect the left side oil pump	198
13.7.10 Install the left side oil pump	198
13.7.11 Install the balancing drive wheel and the driven wheel	198
13.7.12 Install the generator rotor	198
13.7.13 Install the generator stator	198
13.7.14 Install the crankcase cover on the left side	198
13.8 Crankcase, crankshaft, transmission and compensation shaft	199
13.8.1 Crankcase disassembly	199
13.8.2 Remove the crankshaft, compensation shaft, main shaft and counter-shaft	199
13.8.3 Inspect the crankshaft	199
13.8.4 Inspect the bearings on the left and right sides of the crankcase	200
13.8.5 Inspect the gearshift fork, fork shaft and selector drum	200
13.8.6 Inspect the main shaft assembly and the counter-shaft assembly	201
13.8.7 Inspect the oil filters and its components	201
13.8.8 Assemble transmission, crankshaft and compensation shaft	202
13.8.9 Assemble the left and right parts of the crankcase and the filter	202
13.9 Electronic injection removal	203
13.9.1 Injector removal	203
13.9.2 Throttle body removal	204
13.9.3 MAP sensor removal	205