

WORKSHOP MANUAL
CABALLERO 500



Introduction

This manual was prepared by **Fantic Motor** for use by **Fantic Motor** dealers and their specialized personnel. It is assumed that those who use this documentation for repair and maintenance of **Fantic Motor** vehicles have a basic knowledge of the principles and mechanical procedures regarding vehicle repair techniques. In the absence of these notions, repair or maintenance may be inadequate or dangerous.

Fantic Motor is constantly committed in improving its production. Any significant modifications and changes introduced with regard to vehicle characteristics and repair procedures will be brought to the attention of all **Fantic Motor** dealers and will be published in future editions of the manual.

 **Fantic Motor reserves the right to modify and make changes, at any time and without notice, to the models described, specifications and design data, guaranteeing the essential characteristics described and illustrated in this manual.**

 **Operators have the obligation to read the manual and to scrupulously follow the instructions given. The manufacturer is not responsible for damages caused to people and/or things and is not responsible for damages to the product, if the instructions given in this manual are not observed.**

 **This publication, or part of it, cannot be reduced or translated without the Fantic Motor's approval. Reproduction of the contents used in this manual without the Manufacturer's permission is prohibited. Fantic Motor assumes no responsibility for printing errors and omissions. All rights reserved.**

Symbols used in the manual

Within this manual there will be technical warnings and annotations preceded by the following symbols according to the reference topic:

 **Warning regarding the procedure described and the specific safety rules: indicates procedures that must be followed to prevent damage to the vehicle or possible injuries to vehicle repairers.**

 **Information note on the procedure described and on the characteristics of the vehicle: it provides useful information to make the procedure easier and clearer.**

 **Tightening torque: note showing one or more tightening torques values referred to the procedure described.**

 **Measurement data: note showing the values of one or more measurements to be complied with or verified for the procedure described.**

 **Equipment: note that informs the user of the need to use particular tools for the procedure described.**

 **Consumable: note that illustrates the names, types and/or quantities of consumables (such as oil, fuel, sealants, additives, etc.) to be used for the procedure described.**

All left or right indications refer to the direction of travel of the motorcycle.

1 Safety rules	8
2 Maintenance rules	10
2.1 Maintenance	10
2.2 Preparation for interventions	10
3 Vehicle identification	11
4 Spare parts	12
4.1 Gaskets, oil seals and o-rings	12
4.2 Washers, plates and split pins	12
4.3 Bearings and oil seals	12
4.4 Retaining rings	12
5 Tightening Torques	13
5.1 Frame tightening torques	13
5.1.1 Sequences for tightening chassis parts	14
5.2 Engine tightening torques	16
5.3 Generic tightening torques	18
5.3.1 General specifications of the tightening torques	18
5.3.2 Conversion table	18
6 Technical Data	19
6.1 Frame technical data	19
6.2 Engine technical data	20
7 Products	21
8 Scheduled maintenance	22
9 Ordinary maintenance procedures	24
9.1 Engine oil level check	24
9.2 Coolant level check	24
9.3 Pads wear check	25
9.4 Check the front brake master cylinder oil level	25
9.5 Check the rear brake master cylinder oil level	25
9.6 Spark plug check	26
9.7 Front brake adjustment	26
9.8 Rear brake adjustment	26
9.9 Clutch lever clearance adjustment	27
9.10 Throttle cable adjustment	27
10 Electrical system and devices	28
10.1 Electrical system diagram	28
10.1.1 Cables colour coding	28
10.1.2 Key to wiring diagram colours	29
10.1.3 Key to abbreviations of the wiring diagram	29
10.1.4 Key to the wiring diagram components	30
10.1.5 Wiring diagram	32
10.2 Cable path	33
10.3 Devices and connectors	41
10.3.1 Key switch	42
10.3.2 Right light stalk	42

10.3.3 Horn	43
10.3.4 Radiator fan	43
10.3.5 Ignition coil	44
10.3.6 Spark plug	45
10.3.7 Water temperature sensor	46
10.3.8 MAP sensor	46
10.3.9 Neutral gear switch	47
10.3.10 TPS sensor	48
10.3.11 Pick-Up	48
10.3.12 Side kickstand switch	49
10.3.13 OBD diagnosis connector	50
10.3.14 Engine control unit	51
10.3.15 Rear ABS sensor	52
10.3.16 Right rear turn signal	53
10.3.17 Tail light	54
10.3.18 License plate light	55
10.3.19 Left rear turn signal	56
10.3.20 Rear brake light switch	57
10.3.21 Engine ground point	57
10.3.22 Battery negative terminal	58
10.3.23 Battery positive terminal	59
10.3.24 Starter remote control switch	60
10.3.25 Starter motor	61
10.3.26 Generator	62
10.3.27 Voltage regulator	63
10.3.28 Fuel level sensor	64
10.3.29 ABS module	65
10.3.30 ABS mode selection connector	66
10.3.31 Fuel injector	67
10.3.32 Left light stalk	68
10.3.33 Left light stalk - secondary connector	68
10.3.34 Fuse box	69
10.3.35 Front headlight	70
10.3.36 Left front turn signal	71
10.3.37 Right front turn signal	72
10.3.38 Dashboard	73
10.3.39 Dashboard - secondary connector	73
10.3.40 Fuel reserve indicator light	74
10.3.41 Front ABS sensor	74
10.3.42 Stepper motor	75
10.3.43 CDI control unit programming connector	76
10.3.44 Light remote control switch	77
10.3.45 Radiator fan remote control switch	77
10.3.46 Motor sensor remote control switch	78
10.3.47 Fuel pump	78
10.3.48 Oxygen sensor	79
10.3.49 Canister solenoid valve	79
10.4 Fuses and relays	80

10.5 Battery	81
10.5.1 Battery replacement	81
10.5.2 Notes on the battery	81
10.6 Ignition module	82
10.6.1 Ignition module removal	82
10.7 Dashboard	82
10.7.1 Dashboard removal	82
10.7.2 Dashboard settings	84
10.8 Ignition	93
10.8.1 Ignition coil removal	93
10.8.2 Spark plug removal	93
10.8.3 Voltage regulator removal	94
10.9 Light stalk	95
10.9.1 Left light stalk	95
10.9.2 Right light stalk	95
11 Diagnostics	96
11.1 Instruments diagnosis and connection socket	96
11.2 Error codes	97
11.2.1 Ignition module Error codes table	97
11.2.2 ABS module error code table	119
12 Frame	121
12.1 Seat removal	121
12.2 License plate holder removal	121
12.2.1 License plate holder removal (Scrambler version)	121
12.2.2 License plate holder removal (Flat Track version)	122
12.3 Rear tail removal	123
12.3.1 Rear tail removal (Scrambler version)	123
12.3.2 Rear tail removal (Flat Track version)	124
12.4 Passenger handles removal	125
12.5 Side panel removal	125
12.5.1 Left side panel removal	125
12.5.2 Right side panel removal	126
12.6 Air filter removal	126
12.6.1 Oil filter cleaning	126
12.7 Underbody and conveyors removal	126
12.7.1 Left conveyor removal	126
12.7.2 Right conveyor removal	126
12.8 Fuel tank removal	127
12.8.1 Cover removal	127
12.8.2 Complete tank removal	127
12.8.3 Fuel cap removal	128
12.8.4 Tank cover removal	128
12.8.5 Fuel pump removal	129
12.8.6 Fuel level indicator removal	129
12.9 Front mudguard and fork protectors removal	130
12.9.1 Front mudguard removal	130
12.9.2 Fork protectors removal	130

12.10	Rear mudguard removal	131
12.11	Suspensions removal	131
12.11.1	Swingarm removal	131
12.11.2	Swingarm overhaul	132
12.11.3	Swingarm oil change	134
12.11.4	Rear shock absorber removal	134
12.11.5	Linkage removal	135
12.11.6	Fork stems removal	136
12.12	Handlebar removal	136
12.12.1	Handlebar removal	136
12.12.2	Plates removal	137
12.12.3	Steering clearance check and adjustment	137
12.13	Swingarm removal	139
12.14	Chain removal	140
12.14.1	Chain removal	140
12.14.2	Chain clearance adjustment	140
12.14.3	Rim removal	141
12.14.4	Sprocket removal	141
12.14.5	Chain roller removal	141
12.15	Wheels and brake discs removal	142
12.15.1	Front wheel removal	142
12.15.2	Front brake disc removal	142
12.15.3	Rear wheel removal	142
12.15.4	Rear brake disc removal	142
12.15.5	Wheels bearings check	143
12.16	Footrests removal	144
12.16.1	Rider footrest removal	144
12.16.2	Passenger footrest removal	144
12.16.3	Frame plate for rider left pedal removal	144
12.16.4	Frame plate for rider right pedal removal	144
12.17	Kickstand removal	145
12.17.1	Kickstand sensor removal	145
12.18	Brake system removal	146
12.18.1	Brake pads removal	146
12.18.2	Front brake calliper removal	147
12.18.3	Rear brake calliper removal	147
12.18.4	Front brake lever removal	148
12.18.5	Rear brake lever removal	148
12.18.6	Front brake master cylinder removal	149
12.18.7	Rear brake master cylinder removal	149
12.18.8	Brake system draining	150
12.19	ABS system removal	151
12.19.1	ABS system hydraulic diagram	151
12.19.2	ABS module removal	152
12.19.3	Front ABS tubes removal	153
12.19.4	Rear ABS tubes removal	154
12.19.5	Front ABS sensor removal	155
12.19.6	Rear ABS sensor removal	156

12.19.7 Front ABS phonic wheel removal	156
12.19.8 Rear ABS phonic wheel removal	156
12.20 Exhaust system removal	157
12.20.1 Silencer removal	157
12.20.2 Oxygen sensor removal	158
12.21 Cooling system removal	159
12.21.1 Cooling system diagram	159
12.21.2 Radiator removal	159
12.21.3 Fan removal	160
12.21.4 Expansion tank removal	161
12.21.5 Thermostat	162
12.21.6 Thermostat check	162
12.21.7 Thermostat installation	162
12.22 Front optical unit removal	163
12.22.1 Front headlight removal	163
12.22.2 Front turn signals removal	164
12.22.3 Turn signal bulbs replacement	164
12.23 Rear optical unit removal	165
12.23.1 Rear headlight removal (Scrambler version)	165
12.23.2 Rear headlight removal (Flat Track version)	166
12.23.3 Rear turn signals removal	167
12.23.4 Rear turn signal bulbs replacement	167
12.25 Clutch lever removal	168
12.26 Rear-view mirrors removal	168
12.27 Throttle control removal	169
12.27.1 Throttle control knob removal	169
12.27.2 Throttle cables removal	169
13 Engine	170
13.1 Complete engine removal	170
13.2 Engine oil and engine oil filters change	172
13.3 Engine oil volume	173
13.4 Cylinder head and valve	174
13.4.1 Cylinder head components assembling	174
13.4.2 Camshaft and rocker arms components assembling	176
13.4.3 Cylinder head assembling	177
13.4.4 Timing pinion assembly and valve clearance adjustment	177
13.4.5 Cylinder head cover assembling	178
13.4.6 Tappet check and adjustment	179
13.5 Cylinder and piston	180
13.5.1 Piston assembly components assembling	180
13.5.2 Piston and cylinder block installation	181
13.5.3 Assemble the components of the pressure relief valve	181
13.5.4 Assemble the components of the pressure relief valve	181
13.6 Clutch, drive wheel, free wheel, oil pump and gearbox	183
13.6.1 Thin filter and primary filter assembling	183
13.6.2 Oil pump assembling	183
13.6.3 Starter system installation	184

13.6.4 Clutch and main transmission installation	185
13.6.5 Right cover and right decorative cover components assembling	186
13.6.6 Right cover and water pump cover installation	187
13.7 Generator, drive wheel and driven wheel balancing	188
13.7.1 Drive wheel, driven wheel and oil filter installation	188
13.7.2 Left cover components assembling	189
13.7.3 Left cover installation	190
13.7.4 Output shaft bushing and suction pipe installation	191
13.7.5 Installation of the rim and breather pipe	191
13.8 Crankcase, crankshaft, transmission and compensating shaft	192
13.8.1 Right half-crankcase components assembling	192
13.8.2 Left half-crankcase components assembling	194
13.8.3 Crankshaft bearing inner ring assembling	196
13.8.4 Primary shaft, auxiliary shaft and crankshaft installation	197
13.8.5 Half-crankcase coupling and gear sensor installation	198
13.8.6 Install the gearshift drum	199
13.8.7 Crankshaft clearance values reference table	200
13.9 Electronic injection removal	201
13.9.1 Injector removal	201
13.9.2 Throttle body removal	202
13.9.3 MAP sensor removal	203
13.10 Filter canister removal	204
13.10.1 Filter removal	204
13.10.2 Solenoid valve removal	204