

INTRODUCTION

This manual was prepared by **Fantic Motor** for use by **Fantic Motor** dealers and their specialized personnel. It is assumed that those who use this documentation for repair and maintenance of **Fantic Motor** vehicles have a basic knowledge of the principles and mechanical procedures regarding vehicle repair techniques. In the absence of these notions, repair or maintenance may be inadequate or dangerous.

Fantic Motor is constantly committed in improving its production. Any significant modifications and changes introduced with regard to vehicle characteristics and repair procedures will be brought to the attention of all **Fantic Motor** dealers and will be published in future editions of the manual.

 **Fantic Motor reserves the right to modify and make changes, at any time and without notice, to the models described, specifications and design data, guaranteeing the essential characteristics described and illustrated in this manual.**

 **Operators have the obligation to read the manual and to scrupulously follow the instructions given. The manufacturer is not responsible for damages caused to people and/or things and is not responsible for damages to the product, if the instructions given in this manual are not observed.**

 **This publication, or part of it, cannot be reduced or translated without the Fantic Motor's approval. Reproduction of the contents used in this manual without the Manufacturer's permission is prohibited. Fantic Motor assumes no responsibility for printing errors and omissions. All rights reserved.**

MANUFACTURER DATA AND EDITION

FANTIC MOTOR S.P.A.

www.fantic.com - info@fanticmotor.it

Edition: 00/2023.

Code: V1787005.

SYMBOLS USED IN THE MANUAL

Within this manual there will be technical warnings and annotations preceded by the following symbols according to the reference topic:

-  **Warning regarding the procedure described and the specific safety rules: indicates procedures that must be followed to prevent damage to the vehicle or possible injuries to vehicle repairers.**
-  **Information note on the procedure described and on the characteristics of the vehicle: it provides useful information to make the procedure easier and clearer.**
-  **Tightening torque: note showing one or more tightening torques values referred to the procedure described.**
-  **Measurement data: note showing the values of one or more measurements to be complied with or verified for the procedure described.**
-  **Equipment: note that informs the user of the need to use particular tools for the procedure described.**
-  **Consumable: note that illustrates the names, types and/or quantities of consumables (such as oil, fuel, sealants, additives, etc.) to be used for the procedure described.**

All left or right indications refer to the direction of travel of the vehicle.

1. General information.....	8
1.1 Safety Information	8
1.2 Standards of Law.....	9
1.2.1 Meaning of electric moped (L1e)	9
1.2.2 Meaning of electric motorbike (L3e)	9
1.3 Identification	10
1.3.1 Vehicle Identification Number (V.I.N.)	10
1.3.2 Tire and chain specification stickers.....	10
1.4 Spare parts.....	11
1.5 Controls and components.....	12
1.5.1 Controls on the handlebar.....	12
1.5.2 Vehicle component identification.....	13
1.5.3 Instrumentation	14
1.5.4 Dashboard lights and indicators.....	14
1.6 Digital display	16
1.7 Display functions selection	19
2. Description and technical data	21
2.1 Technical Data	21
2.1.1 Dimensions	21
2.1.2 Technical Data	22
2.2 Tightening torques.....	23
2.2.1 Specific tightening torques	23
2.2.2 General tightening torques	26
3. Maintenance	27
3.1 Maintenance rules.....	27
3.2 Preparation for interventions	27
3.3 Periodic maintenance programme.....	28
3.4 Cleaning the vehicle.....	30
3.5 Tires.....	31
3.5.1 Tire pressure check	31
3.5.2 Tire valves check	32
4. Main assemblies	33
4.1 Identification of main assemblies.....	33
5. Handlebar assembly	34
5.1 Dashboard and support bracket.....	34
5.2 Complete handlebar	35
5.3 Handlebar mount.....	36
5.4 Handlebar components.....	37
5.4.1 Gas throttle - Right steering switch.....	37
5.4.2 Left steering switch	37
5.4.3 Mirrors.....	38
6. Front fairing assembly	39
6.1 Windshield and front cover	39
6.2 Front shield assembly.....	39
6.2.1 Front bonnet.....	39
6.2.2 Front shield closing.....	40

6.2.3 Front shield	40
6.3 Inner shield assembly	42
6.3.1 Bag hook	42
6.3.2 Inner shield	42
6.4 Front mudguard	45
6.5 Footboard assembly	45
6.5.1 Left and right footboard.....	45
6.5.2 Underbody.....	47
7. Front fork assembly	48
7.1 Complete fork.....	48
7.2 Steering bearing clearance check.....	49
7.3 Overhaul of fork legs.....	50
7.3.1 Replacement of dust cover and fork oil seal	50
7.3.2 Fork leg oil change	51
8. Front wheel assembly.....	52
8.1 Front wheel.....	52
8.2 Front brake disc.....	52
9. Front brake assembly	53
9.1 Front brake lever	53
9.2 Front brake master cylinder	53
9.3 Front brake calliper.....	53
9.3.1 Front brake pads.....	54
9.4 Front brake tubes.....	55
9.5 Braking distributor.....	56
9.6 Front brake fluid level check.....	57
9.7 Purging the brake system.....	57
9.7.1 Procedure for checking and topping up brake fluid.....	58
9.7.2 System filling procedure.....	58
9.7.3 System purging procedure	58
10. Rear fairing and seat assembly	59
10.1 Seat.....	59
10.1.1 Seat lock	59
10.1.2 Seat lock cable.....	60
10.2 Rear side panel assembly	61
10.2.1 Handle	61
10.2.2 Luggage rack cover.....	61
10.2.3 Rear side panel	62
10.2.4 Structural luggage rack.....	63
10.2.5 License plate holder.....	64
10.2.6 Luggage rack base.....	65
10.2.7 Rear frame covers.....	65
10.2.8 Side dumpers.....	66
10.2.9 Battery charger panel	66
10.3 Chain Cover	67
10.4 Motor access covers	68
10.4.1 Right motor access cover	68

10.4.2 Left motor access cover	68
11. Rear shock absorber assembly.....	69
11.1 Rear shock absorbers.....	69
12. Rear wheel assembly	70
12.1 Rear wheel	70
12.2 Rear brake disc	70
12.3 Rim	70
13. Rear brake assembly	71
13.1 Rear brake lever.....	71
13.2 Rear brake master cylinder.....	71
13.3 Rear brake calliper	71
13.3.1 Rear brake pads	72
13.4 Rear brake tube	72
13.5 Rear brake fluid level check.....	74
14. Kickstand assembly	75
14.1 Central kickstand.....	75
14.2 Central kickstand bracket.....	75
15. Swingarm assembly.....	76
15.1 Swingarm	76
15.2 Rear swingarm bearing and silentblock.....	77
16. Frame assembly	78
16.1 Rear frame.....	78
16.2 Frame fastening bracket	81
16.3 Buffer bracket	82
16.4 Left and right underbody supports	82
16.5 Front shield support	83
16.6 Front frame	83
17. Power Train and Transmission Assembly.....	84
17.1 Electric motor	84
17.2 Drive chain	86
17.2.1 Chain tensioning check.....	86
17.2.2 Chain adjustment.....	86
17.3 Sprocket.....	87
18. Electrical system	88
18.1 Blinker	88
18.2 Ambient air temperature sensor.....	88
18.3 Headlight and cover.....	89
18.3.1 Headlight inclination adjustment	90
18.4 Tail light.....	90
18.5 Rear turn signals.....	91
18.6 Front turn signals	91
18.7 Inverter.....	92
18.8 USB socket.....	93
18.9 Keyless lock	94
18.10 Remote controls with key	95

18.11	Keyless control unit.....	96
18.12	Horn.....	96
18.13	Main wiring routing.....	97
18.14	Devices, wiring and connectors	99
18.14.1	Upper front part.....	99
18.14.2	Front central part.....	100
18.14.3	Lower front part.....	101
18.14.4	Right side part.....	102
18.14.5	Lower part.....	103
18.14.6	Rear.....	104
18.14.7	Central part.....	105
18.14.8	Rear.....	106
18.15	Fuses.....	107
18.16	Batteries.....	108
18.16.1	Battery management when first using the moped	108
18.16.2	Battery range	109
18.16.3	Disposal of spent batteries	109
18.17	Battery charger.....	110
18.17.1	Charger activity.....	110
18.17.2	Charging time	110
18.18	Batteries charging	111
18.18.1	Charging with two batteries.....	111
18.18.2	Charging with one battery	113
18.19	Batteries condition check.....	113
18.20	Wiring diagram	114
18.20.1	Introduction.....	114
18.20.2	Information for reading the wiring diagram	115
18.20.3	Key to the wiring diagram components	116
18.20.4	Wiring diagram (part 1/4).....	117
18.20.5	Wiring diagram (part 2/4)	118
18.20.6	Wiring diagram (part 3/4)	119
18.20.7	Wiring diagram (part 4/4)	120
18.21	Functional diagrams	121
18.21.1	Introduction	121
18.21.2	Information for reading functional diagrams.....	121
18.21.3	Lists and references of functional diagrams	123
18.21.4	Function: Power supply	124
18.21.5	Function: Ground.....	126
18.21.6	Function: Ignition	128
18.21.7	Function: Motor management.....	130
18.21.8	Function: Lighting	132
18.21.9	Function: Controls, dashboard and indicators	134
18.21.10	Function: Diagnostics.....	136
18.21.11	Function: Electric motor and batteries	138
18.21.12	Function: Horn	140
18.21.13	Function: USB	142
18.21.14	Function: Auxiliary socket (48V)	144
18.21.15	Function: Connectivity System.....	146

19. Diagnostics.....	148
19.1 Instruments diagnosis and connection socket	148
19.2 Error codes.....	149