

FANTIC WANTS TO THANK YOU

for choosing one of its products.

We recommend that you read this manual before driving your vehicle. It contains information, advice and warnings on the vehicle maintenance and use. The instructions in this manual have been prepared to give you a simple and clear guide for use. We are sure that taking it into consideration you will gain confidence with your new vehicle, which you can use for a long time and with full satisfaction.

INTRODUCTION	6
Manufacturer data and edition.....	6
GENERAL INFORMATION.....	7
Symbols used.....	7
Changes made	7
General warnings.....	8
Vehicle identification.....	13
RULES OF USE	15
Behaviour and driving.....	15
Running-in rules	18
Turning the vehicle on and off.....	19
Starting and using the gearshift	22
Safe braking	23
Anti-lock Brake System (ABS)	24
ABS Cornering System (optional)	25
Passenger seat removal	25
Parking	26
Side kickstand.....	26
Baggage.....	27
Silencer.....	27
Clothing.....	28
Accessories.....	28
Transport.....	28
Refuelling	29
MAIN ELEMENTS AND DEVICES.....	30

TABLE OF CONTENTS

Main controls	30
Panel commands	32

DRIVING CONTROLS AND ADJUSTMENTS33

Ignition switch	33
Steering lock engagement	34
Engine stop button	34
Start button	35
Horn button	35
Turn signal switch	36
Low beam/high beam light switch	36
High beam flashing button	37
Emergency light button	37
Suspensions	38
Front brake lever adjustment	41
Clutch lever adjustment	41
Headlights and turn signals	42
Headlights alignment	42
Rear-view mirrors	44
Digital dashboard	45
Dashboard controls	52
Display Mode selection	53
Riding information menu (RIDE)	53
Riding mode selection	54
Accessing the settings menu	56
Warnings and errors displaying	60
Engine Stop / Start	62

ORDINARY MAINTENANCE OPERATIONS	63
Importance of routine maintenance	63
Safety rules for routine maintenance	63
Verification operations to be carried out by the customer	64
Engine oil.....	65
Tires	67
Coolant.....	70
Braking system	72
Drive chain	75
Clutch lever clearance adjustment	78
Troubleshooting	80
Battery	82
Fuses and relays	84
Vehicle inactivity.....	86
Vehicle washing.....	87
Recommended products table.....	89
MAINTENANCE PLAN	91
Maintenance schedule	91
Scheduled maintenance plan	92
TECHNICAL DATA	96
DECLARATION OF CONFORMITY	100

INTRODUCTION

This manual is an integral part of the vehicle and if the vehicle should be resold, it must be delivered together with the vehicle. **Fantic Motor** reserves the right to modify and make changes, at any time and without notice, to the models described, specifications and design data, guaranteeing the essential characteristics described and illustrated herein. This publication, or part of it, cannot be reduced or translated without the company's approval. Reproduction of the contents used in this manual without the Manufacturer's permission is prohibited. **Fantic Motor** assumes no responsibility for printing errors and omissions. All rights reserved.

Read this manual carefully before starting the engine. Your safety and that of others does not depend only on your quickness of reflexes and agility, but also on your knowledge of the vehicle, its condition and the rules for safe driving. Therefore, it is recommended that you familiarise yourself with the vehicle so that you can handle all driving situations with mastery and confidence.

MANUFACTURER DATA AND EDITION

FANTIC MOTOR S.P.A.

www.fantic.com - info@fanticmotor.it

Edition: 00/2025.

Code: V2515005.

SYMBOLS USED

In this manual you will find notes and warnings marked by the following symbols:



Important safety regulations for the vehicle and the driver.



Information notes on the vehicle use and characteristics.



Tightening torque: note indicating one or more tightening torques values referred to the procedure described.



Measurement data: note indicating the values of the measurements to be complied with or to verify for the procedure described.



Equipment: note warning the user of the need for specific tools for the described procedure.



Consumable: note that illustrates the names, types and/or quantities of consumables (such as oil, fuel, sealants, additives, etc.) to be used for the procedure described.

CHANGES MADE

Any arbitrary changes made to the vehicle, including the removal of original parts, can impair its performance and lower its safety level, even making it illegal. It is recommended to always comply with all national and local laws and regulations regarding vehicle equipment. In particular, it is essential to avoid technical modifications intended to increase performance or alter the original characteristics of the vehicle.

Alterations to original parts are not only forbidden by law, but also make the vehicle non-compliant and dangerous for driving. Such changes invalidate the warranty and invalidate the type-approval.

Fantic Motor declines all responsibility for damage or injury to persons, animals or property resulting from arbitrary changes. The user is personally responsible for the choice of installation and use of accessories, and is strongly advised to use original accessories.

GENERAL INFORMATION

GENERAL WARNINGS

Hot components

-  Some vehicle components, such as the engine, exhaust and radiators, can reach high temperatures and remain hot for some time even after the vehicle is switched off. It is therefore important to wear appropriate clothing and insulating gloves or wait for complete cooling before performing any work in their vicinity.

Carbon monoxide

-  Exhaust fumes contain, among other substances, carbon monoxide, a toxic gas that can cause death. Therefore, for certain operations, it is essential to ensure that the work is carried out in an open space or in a well-ventilated environment. If operating in enclosed spaces, use an evacuation system for the exhaust fumes.

Fuel

-  The fuel used is extremely flammable and can become explosive under certain conditions; therefore, it is essential to carry out refuelling and maintenance operations in a well-ventilated area and with the vehicle switched off.
-  Do not smoke during refuelling and/or in the presence of fuel vapours; avoid contact with open flames, sparks and/or any other source that could cause ignition and/or explosion.
-  During maintenance operations, always wear suitable clothing, gloves and protective goggles.
-  The fuel used is harmful to health both if inhaled and ingested. Moreover, it is an irritant and can cause serious consequences if it comes into contact with the skin and/or eyes.
-  If swallowed, do not induce vomiting. Go urgently to a first aid centre, reporting the cause and how the accident occurred.
-  In case of contact with the skin, wash the affected parts immediately with plenty of clean water and soap, repeating the operation until all residues have been removed.

-  In case of contact with the eyes, immediately rinse the affected parts with plenty of clean, fresh water and go to a first-aid centre as a matter of urgency, indicating the cause and how the accident occurred.
-  In case of contact with clothing, undress and wash with plenty of clean water and soap. Replace contaminated clothing and wash it specifically as soon as possible.
-  Keep out of the reach of children.
-  Do not disperse in the environment .

Engine oil, brake oil and suspension oil

-  During maintenance operations, always wear suitable clothing, gloves and protective goggles.
-  The engine oil, brake oil and suspension oil used are harmful to health, both if inhaled and ingested. They are also irritating, brake fluid is also corrosive, and can cause serious consequences if they come into contact with the skin and/or eyes.
-  If swallowed, do not induce vomiting. Go urgently to a first aid centre, reporting the cause and how the accident occurred.
-  In case of contact with the skin, wash the affected parts immediately with plenty of clean water and soap, repeating the operation until all residues have been removed.
-  In case of contact with the eyes, immediately rinse the affected parts with plenty of clean, fresh water and go to a first-aid centre as a matter of urgency, indicating the cause and how the accident occurred.
-  In case of contact with clothing, undress and wash with plenty of clean water and soap. Replace contaminated clothing and wash it specifically as soon as possible.
-  Brake fluid may damage the painted surfaces and the plastic and/or rubber components of the vehicle. During maintenance, it is advisable to protect these components with a clean cloth.

GENERAL INFORMATION

 **Keep out of the reach of children.**

 **Exhausted engine oil, brake oil and suspension oil must be collected in a sealed container and delivered to the nearest workshop, waste oil collection point or ecological island, where authorised personnel will dispose of them.**

 **Do not disperse in the environment .**

Coolant

 **During maintenance operations, always wear suitable clothing, gloves and protective goggles.**

 **When the engine is running, the coolant is under pressure. Therefore, it is important to wait for the hot vehicle components to cool completely before removing the radiator cap.**

 **The ethylene glycol in the coolant may be flammable. Although the flame is not visible, it can still cause severe burns.**

 **Take care not to spill coolant on hot vehicle components.**

 **The coolant used is harmful to health, both if inhaled and ingested. Moreover, it is an irritant and can cause serious consequences if it comes into contact with the skin and/or eyes.**

 **If swallowed, do not induce vomiting. Go urgently to a first aid centre, reporting the cause and how the accident occurred.**

 **In case of contact with the skin, wash the affected parts immediately with plenty of clean water and soap, repeating the operation until all residues have been removed.**

 **In case of contact with the eyes, immediately rinse the affected parts with plenty of clean, fresh water and go to a first-aid centre as a matter of urgency, indicating the cause and how the accident occurred.**

-  In case of contact with clothing, undress and wash with plenty of clean water and soap. Replace contaminated clothing and wash it specifically as soon as possible.
-  Keep out of the reach of children.
-  Do not disperse in the environment .

Battery

-  The type of battery installed is maintenance-free, so there is no need to check the electrolyte level or top up with distilled water.
-  It is important to ensure adequate ventilation during battery charging operations.
-  The battery can release explosive gases. Avoid contact with naked flames, sparks and any other source potentially capable of igniting or exploding.
-  The electrolyte in the battery may contain acids, such as sulphuric acid. This electrolyte is harmful to health, whether inhaled or ingested. In addition, it is irritating, corrosive and caustic, and can cause serious consequences if it comes into contact with the skin and/or eyes.
-  If swallowed, do not induce vomiting. Go urgently to a first aid centre, reporting the cause and how the accident occurred.
-  In case of contact with the skin, wash the affected parts immediately with plenty of clean water and soap, repeating the operation until all residues have been removed.
-  In case of contact with the eyes, immediately rinse the affected parts with plenty of clean, fresh water and go to a first-aid centre as a matter of urgency, indicating the cause and how the accident occurred.
-  In case of contact with clothing, undress and wash with plenty of clean water and soap. Replace contaminated clothing and wash it specifically as soon as possible.

GENERAL INFORMATION



Keep out of the reach of children.



Dispose of the spent battery regularly.



Do not disperse in the environment .

Radiator and cooling fan



Keep hands and clothing away from the cooling fan as it starts automatically and without warning.

VEHICLE IDENTIFICATION

Frame number

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

Engine number

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

Fantic Motor vehicles are equipped with frame and engine identification numbers. It is advisable to write down the identification numbers in the spaces indicated above, in order to remind them in case of loss or damage.




Do not modify the identification data in order to avoid serious penal and administrative sanctions. In addition, the warranty for new vehicles will be invalidated if the frame identification number has been changed and can not be readily determined.

GENERAL INFORMATION

Frame number

The frame number is punched on the steering tube on the right side.


- ① The image shown is for information only.
- ① For the original spare parts supply this identification number to your dealer.

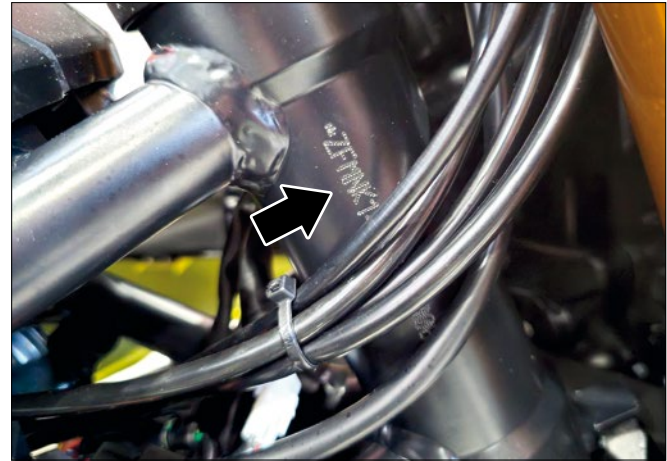

Engine number

The engine number is punched on the left side of the crankcase.

- ① The image shown is for information only.

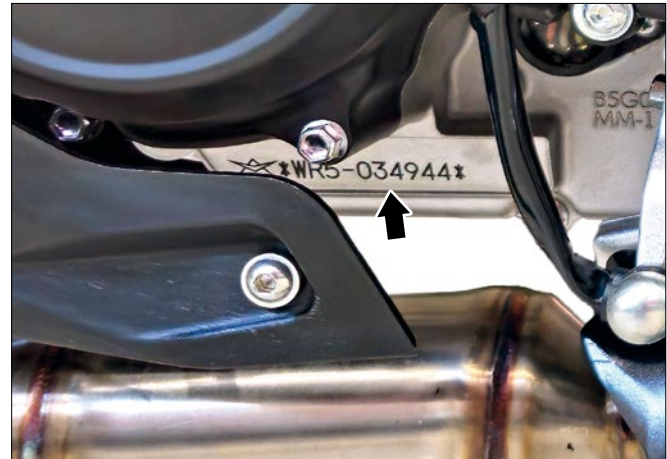

BEHAVIOUR AND DRIVING

Some safety tips are given below to avoid damage to people and/or things and to use your vehicle with an easier and safer drive.

Vehicle use

To use the vehicle it is necessary to meet all the law requirements.

It is advisable, in order to acquire a good knowledge of the vehicle, to use it in areas without traffic or unpopulated stretches of road.

It is advisable to always respect the highway code while driving, to avoid sudden or dangerous manoeuvres keeping both hands on the handlebar and always keeping your feet on the appropriate footboards. Pay close attention while riding.

 **Do not ride the vehicle while drunk, under the influence of drugs, after taking certain medicines or in a state of physical fatigue and drowsiness. Failure to comply with these rules is considered extremely dangerous and could cause serious damage to property and/or people.**

 **Before driving, check the vehicle for fluid leaks such as engine oil, brake oil, suspension oil and coolant.**

Evaluate and keep in consideration the conditions of the road surface, visibility and weather. In a situation not suitable for safe driving, reduce the speed and drive carefully.

The braking effect in wet roads without ever having applied the brakes is initially less; under these conditions it is advised to periodically operate the brakes.

 **Although the vehicle is equipped with an ABS system, be careful when braking on low-grip surfaces, such as wet or unpaved roads.**

If the vehicle is used on roads that are dirty with sand, mud or snow mixed with salt, it is recommended to check the brake discs and, if necessary, clean them with suitable non-aggressive detergents to remove any abrasive agglomerates inside the holes, which could cause premature wear of the brake pads.

The getting on and off from the vehicle must be in complete freedom of movement and without impediments.

Go up and down only from the left side of the vehicle and with the side kickstand down to prevent unbalancing or loss of balance, causing falls or overturns.

 **The rider is always the first to go on and the last to go down as he/she has to govern the stability of the vehicle.**

RULES OF USE

Getting on

Hold the handlebar correctly without putting your weight on the side kickstand and get on the vehicle. Keep your feet on the ground to support the vehicle in an upright position, ready to start.

-  The side kickstand is designed to support the weight of the vehicle and a minimum load, without rider and passenger.**
-  If it is not possible to have both feet on the ground when getting on, keep only the right foot on the ground, as the left side of the vehicle is supported by the side kickstand, in case of imbalance or loss of balance.**

The footboards must be extracted from the passenger and wait for him/her to get on the vehicle.

-  The rider must instruct the passenger on how to get on the vehicle. The passenger must climb with the utmost caution, avoiding to unbalance the rider and the vehicle.**
-  The passenger must always get on from the left side of the vehicle, using the left footboard.**

Use the left foot to retract the lateral kickstand.

Getting off

Stop the vehicle in an area suitable for stopping or parking, ensuring that the ground is stable and free of obstacles. Fully extend the side kickstand using the left foot.

-  If it is not possible to have both feet on the ground when getting off, keep only the right foot on the ground, as the left side is supported by the side kickstand, in case of imbalance or loss of balance.**

Keeping the vehicle in running position, wait for the passenger to get off the vehicle.

-  The passenger must always get off from the left side of the vehicle, using the left footboard.**
-  The rider must instruct the passenger on how to get off the vehicle. The passenger must get off with the utmost caution, avoiding unbalancing the rider and the vehicle.**

 Do not get off the vehicle jumping or by stretching the leg to touch the ground. The stability and balance of the vehicle would be compromised.

Tilt the vehicle making the side kickstand touch the ground.
Get off the vehicle and turn the handlebar completely to the left.



Make sure that the vehicle is stationary and stable.



Do not lift the vehicle grasping the license plate holder frame, in order to avoid damage.

RULES OF USE

RUNNING-IN RULES

Engine

The period between 0 and 1000 km (600 mi) is the most important in the life of the engine. For this reason, it is essential to carefully follow the instructions below.

As the engine is new, it should not be subjected to excessive strain in the first 1000 km (600 mi). In this phase, the various engine parts wear and adapt to each other, creating the correct operating clearances. During this period, it is essential to avoid driving for long periods at full throttle or in conditions that could cause engine overheating.

0-500 km (0-300 mi)

- Avoid prolonged operation above 5000 rpm.
- After every hour of use, switch off the engine and allow it to cool down for 5-10 minutes.
- Vary the engine speed occasionally and do not constantly maintain the same throttle opening.

500-1000 km (300-600 mi)

- Avoid prolonged operation above 7500 rpm.
- Accelerate freely in the various gears, but never at full throttle.

 **At 1000 km (600 mi), carry out the first service as indicated in the "Scheduled Maintenance Plan".**

1000 km (600 mi) and beyond

- At this point, the vehicle can be used normally.

 **Always keep the engine speed outside the red zone of the tachometer.**

 **In case of malfunctions of the engine during the running-in period, immediately contact an authorised Fantic Motor Service Centre.**

Braking system


Brake pads, being new, require a running-in period to achieve perfect contact with the discs. The brakes running-in requires approximately 200 km (125 mi) of urban driving. During this period, allow longer braking distances and apply more pressure on the brake lever. Avoid abrupt or prolonged braking.

TURNING THE VEHICLE ON AND OFF

Starting

Release the steering lock turning the key clockwise and get on the vehicle assuming the correct posture, making sure that the side kickstand is completely retracted.

⚠ If the side kickstand is lowered, the vehicle can be started only with the gearshift in neutral. If you try to engage the gear the vehicle will switch off.

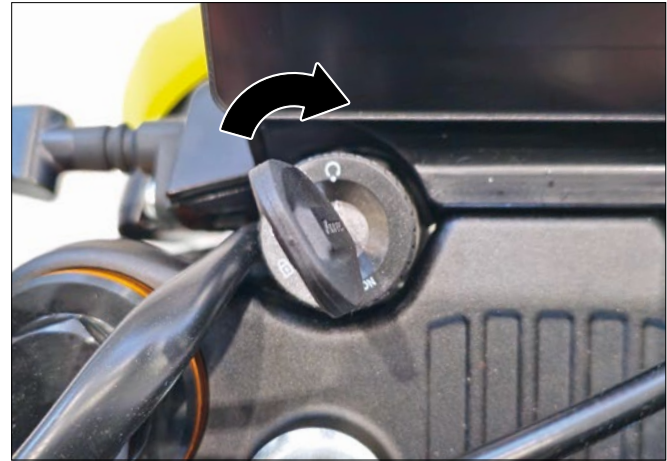


For safety reasons, it is necessary to apply the front and/or rear brake, pull the clutch lever and make sure the gearshift is in neutral before starting the engine.



RULES OF USE

Turn the key to **(ON)** and wait a few seconds to load the standard parameters on the digital dashboard.

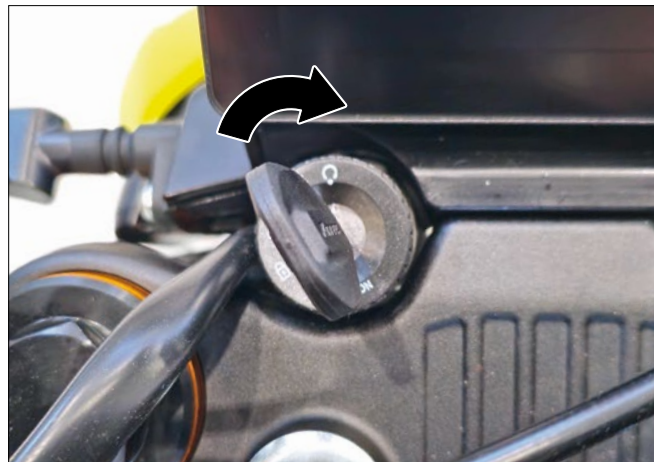


Deactivate the engine stop function by pressing button “A” from position “1” to position “2”.

Next, press the button in position “3” to start the engine.



It is advisable to warm up the engine well, proceeding for the first kilometres at reduced speed. Do not start abruptly with the cold engine.

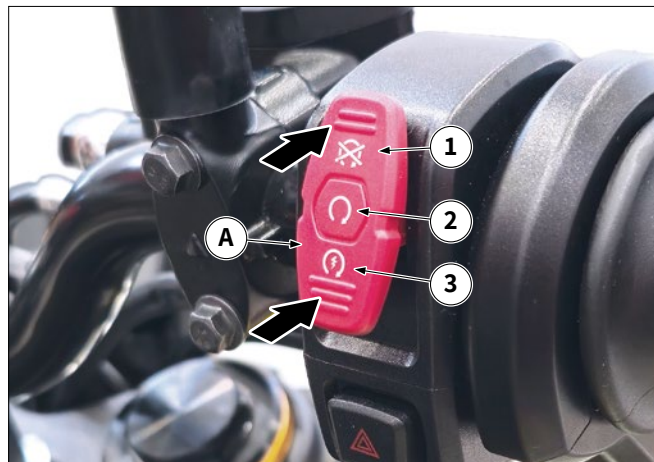

Engine stop

⚠ Do not operate the engine stop switch while the vehicle is in motion, as this could cause the engine to suddenly switch off, resulting in mechanical damage and, above all, the risk of losing control of the vehicle.

⚠ Avoid releasing the clutch too quickly or abruptly. A sudden release could cause the engine to switch off or uncontrolled acceleration that could cause the front wheel to lift.

⚠ Avoid sudden stops or sudden vehicle slow-downs.

Gradually slow down until the vehicle comes to a complete standstill by simultaneously operating the clutch and using both brakes.


Keeping the clutch engaged, place the gearshift lever in neutral.

Then turn the key anti-clockwise to the **(OFF)** position and press the engine stop switch (see "Engine stop switch section").

Lower the side kickstand and step off the left side of the vehicle.

If necessary, engage the steering lock (see "Steering lock engagement" section).

i If you forget the key turned to "ON", the battery charge level will decrease until it is down and will need to be replaced.

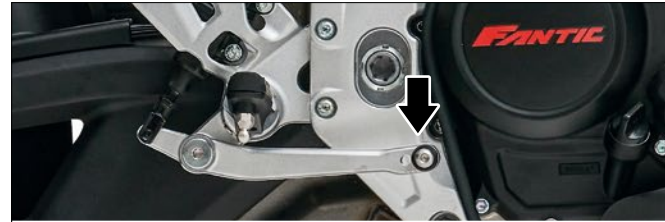


RULES OF USE

STARTING AND USING THE GEARSHIFT

Starting

After starting the vehicle and warming the engine well, operate the clutch lever and engage the first gear pressing the gearshift pedal downwards. The neutral indicator light (N) will go off on the dashboard.

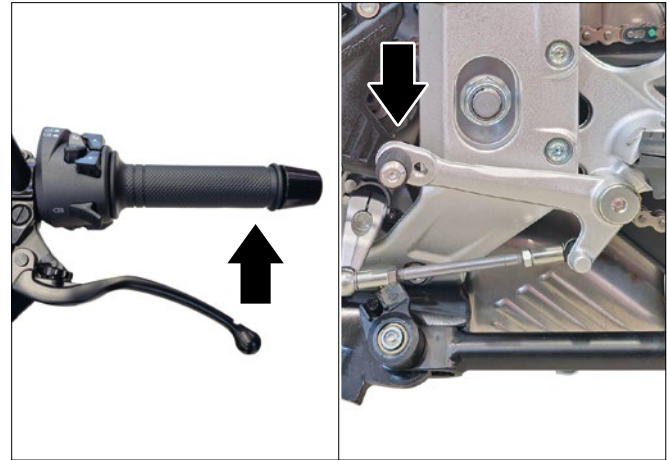

Releasing the clutch slowly, gradually accelerate to allow the vehicle to move forward.


⚠ During the acceleration phase, the engine is limited not to exceed 11200 rpm (indicated by the tachometer in the “Digital dashboard” section), to avoid causing serious damage to the engine.



Gearshift use

To change gears, release the throttle grip, operate the clutch lever and lift the gearshift pedal up to shift up, or push down to shift down.

- i** If you are new to driving the vehicle, it is important to familiarise yourself with the vehicle's controls and functions.
- !** Shift one gear at a time. Upshifting or downshifting the gearshift more than a single gear at a time may cause the engine to run out of speed and risk to exceed the maximum speed allowed by it.

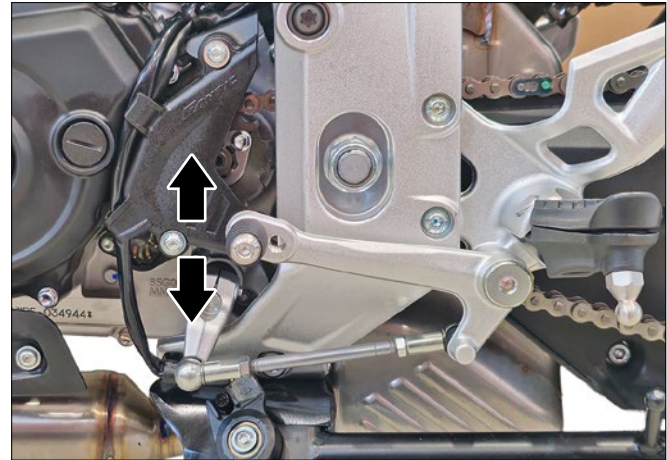

SAFE BRAKING

- i** Reduce speed in time and downshift to use the engine brake, then apply gradual braking using both brakes (front and rear) in a balanced way.
- i** Before the vehicle stops completely, actuate the clutch to prevent the engine from suddenly shutting down.
- !** Take particular care on wet, unpaved or slippery surfaces (such as gravel, leaves or ice), where grip is reduced; brake gently and avoid hard braking or excessive use of the front brake to prevent wheel lock-up and reduce the risk of a fall.

RULES OF USE

ANTI-LOCK BRAKE SYSTEM (ABS)

The vehicle is equipped with an ABS system that can intervene either on the front wheel only or on both wheels, depending on the riding mode selected. For more information, see the "Riding mode selection" section.


ABS consists of an electro-hydraulic device that regulates the pressure within the brake circuit during braking by detecting the locking tendency of the phonic wheels "A" via angular speed sensors "B".

This system improves vehicle stability when braking compared to a conventional braking system, thus reducing the risk of a crash.

 **Do not exceed the physical road holding limits of the vehicle. It is the rider's responsibility to keep an appropriate speeds, always evaluating the weather and road conditions. The ABS cannot compensate for errors in judgement and/or incorrect use of the vehicle.**

 **In the event of a battery malfunction, the ABS system is deactivated.**

 **Up to a speed of 5 km/h (3 mi/h), the ABS system is not active. Take particular care when braking at low speeds, especially in low-grip conditions.**

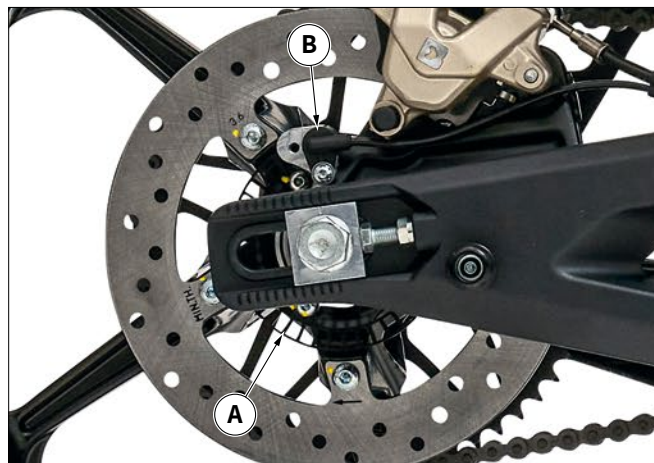

⚠ The ABS system intervenes either only on the front wheel or completely on both wheels by receiving information from the phonic wheels. It is important to always check that the phonic wheels are clean and periodically check that the distance from the sensor is constant. For verification and adjustment, contact an authorized Fantic Motor Center.

ABS CORNERING SYSTEM (OPTIONAL)

i **ABS Cornering functionality is available exclusively with the purchase and installation of the IMU platform, carried out at a Fantic Motor Authorised Centre.**

The ABS system integrates “cornering” functions that optimises ABS performance even when the vehicle is inclined preventing locking and slipping of the wheels within the physical limits allowed by the vehicle and the road conditions.

The system is available in the “STREET” riding mode.

PASSENGER SEAT REMOVAL


To remove the passenger seat:

- Place the vehicle on the side kickstand.
- Unscrew screw “A” located under the portion of the seat shown in the figure.

🔧 Passenger seat screw:
3 N·m (0.3 m·kgf, 2 ft·lbf).

- Slide the passenger seat “B” towards the rider’s side.

⚠ **Before riding, check that the seat has been correctly fixed.**

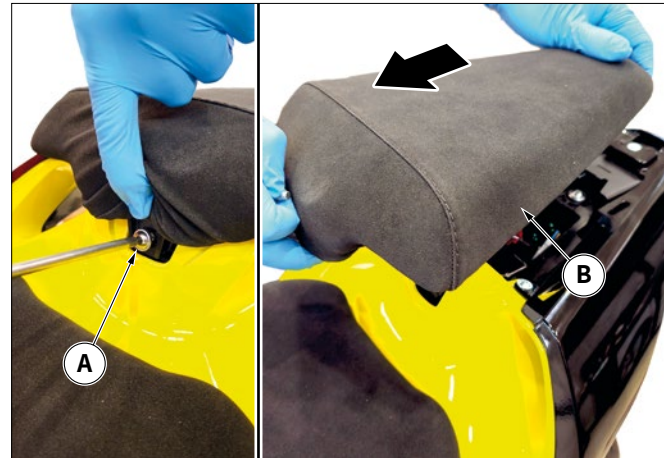

RULES OF USE

PARKING

Choose the parking zone carefully and with attention. It is very important to respect the road signs and the indications given below.

-  **Do not park the vehicle placing it against the walls or laying it on the ground. Make sure that the parking area is solid and level.**
-  **Make sure that parts subject to high temperatures (exhaust, engine, radiator, brake discs, etc.) are not dangerous for people and the surrounding environment.**
-  **Never leave the vehicle on and unattended with the key inserted.**

Tips to prevent theft

Never leave the ignition key on and always use the steering lock. Park the vehicle in a safe place, possibly in a garage or in a monitored place. Check that the documents and the circulation tax are in order.

SIDE KICKSTAND

-  **Before leaving make sure that the side kickstand is fully up. Do not load your weight or the passenger's weight on the side kickstand.**

The side kickstand is located on the left side of the frame. Raise or lower the side kickstand with your left foot while holding the vehicle straight.

The side kickstand is equipped with an ignition circuit breaker system that has the following functions:

- Prevent starting when the gearshift is engaged and the side kickstand is raised, with the clutch lever not pulled.
- Prevent starting when the gearshift is engaged and the clutch lever is pulled, but with the side kickstand still down.
- Switch off the engine when the gearshift is engaged and with the side kickstand down.

-  **The side kickstand switch is part of the ignition circuit breaker system, allowing the engine to be stopped.**

-  **It is recommended to regularly check the correct functioning of the side kickstand interruption system and the side kickstand itself. In the event of a malfunction, please visit an authorised Fantic Motor Center.**

BAGGAGE

Adding luggage to the vehicle may impair its driving. It is advisable to keep the load close to the centre of gravity for balanced weight distribution and to anchor it firmly, avoiding handlebars, forks, mudguards and number plate holders. Poorly anchored loads reduce stability and handling, especially when cornering. Avoid overloading to avoid compromising stability and handling. Ensure that the luggage does not protrude and cover the acoustic and visual warning devices.

SILENCER

This component, with regard to exhaust gas, has the task of oxidizing carbon monoxide converting it into carbon dioxide, of transforming unburnt hydrocarbons into water vapour and reducing nitrogen oxides converting them into oxygen and nitrogen.

 During the vehicle use, the part of the exhaust system corresponding to the catalytic element can take a bright red colour: this colour variation is absolutely normal and indicates a correct operation of the catalyst.

 Avoid stopping or parking the vehicle near places where there is dry brushwood.

 Avoid places accessible to children and/or people.

 The silencer reaches high temperatures, so avoid any kind of contact and pay the maximum attention until it has not completely cooled down.

 It is forbidden to modify, alter or tamper with the exhaust system in any way.

 Do not use leaded petrol as it will ruin the catalyst.

Check that there are no holes and signs of rust or wear on the exhaust system.

Check that the exhaust system always works correctly.

In case of increased or abnormal noise, contact a Authorized Fantic Motor Center as soon as possible.

 For maintenance, repair or replacement work, contact an Authorized Fantic Motor Center.

RULES OF USE

CLOTHING

Always wear and fasten the helmet before starting to ride the vehicle. The helmet must be approved, intact and with the visor intact and clean. Wear appropriate protective clothing and no hanging accessories that could create problems when riding the vehicle. Prefer bright, reflective clothing to be more visible and protected in the event of a fall. Do not wear or carry sharp objects as they are potentially dangerous in the event of a fall.

 **All these recommendations also apply to the passenger.**

ACCESSORIES

Fantic Motor recommends the use of original accessories available from authorised dealers.

If the installed accessories are not original, the user is responsible for their selection and correct installation.

The accessory absolutely must not:

- Damage to persons, property or the rider.
- Limit suspension travel.
- Cover, partially or totally, the acoustic and visual signalling devices.
- Limit the use of steering and controls (brakes, throttle, etc.).
- Reduce the steering angle.
- Prevent the vehicle from leaning when cornering.

Any large fairings and windshields fitted to the vehicle may reduce the stability of the vehicle.

Excluding specific Fantic Motor accessories, do not install or make any modifications to electrical equipment: this could result in a dangerous power failure necessary for the operation of acoustic and visual warning devices.

TRANSPORT

Before transporting the vehicle, the fuel tank must be completely emptied to prevent accidental spillage. Also check that all components are dry. The vehicle must be firmly secured, with first gear engaged and in a stable position, ready for transport.



 **In the event of failure, do not perform towing or unsafe and risky procedures that may endanger people and/or things. This would result in the risk of causing accidents or damage to the vehicle.**

REFUELLING

-  **During refuelling, it is forbidden to smoke, use open flames or electrical devices that can generate sparks. Failure to do so may result in fire or explosion, with serious risks to persons and property.**
-  **Do not add additives or other substances to the fuel during refuelling.**
-  **Avoid fuel leakage during refuelling. If a funnel or other instrument is used, make sure it is properly cleaned to avoid contaminating the fuel.**
-  **It is recommended to use only the type of fuel specified in the "Recommended Products Table" section. The use of different fuels could damage the fuel system and impair engine operation.**

To refuel, lift the cover "A".
 Insert the key "B" into the lock and turn it clockwise.
 Lift the cap "C" and refuel.
 After refueling, close cap "C" again by applying light pressure on it.
 Turn the key "B" counter-clockwise and then remove it.
 Close the cover "A".

-  **Make sure that the tank cap is closed before starting the vehicle.**

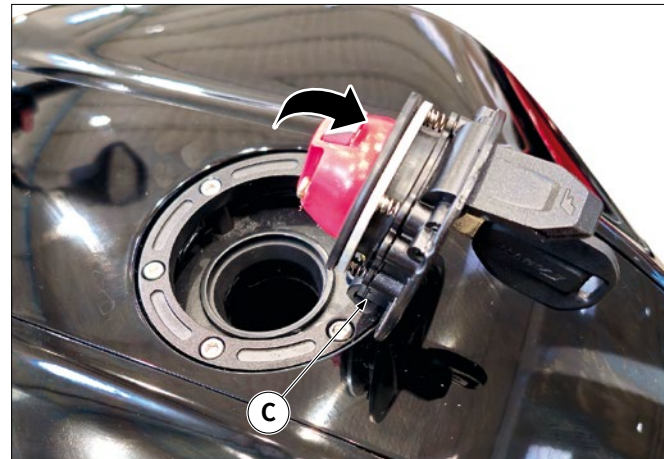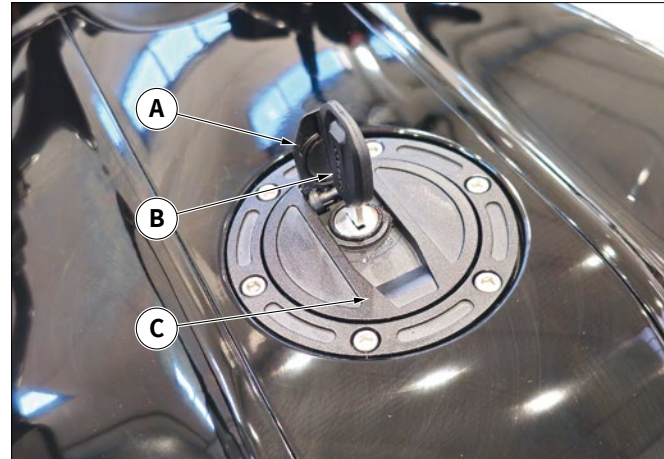

MAIN ELEMENTS AND DEVICES


MAIN CONTROLS



- 1. Left headlamp
- 2. Left front turn signal
- 3. Digital dashboard
- 4. Clutch lever
- 5. Left light stalk
- 6. Tank cap
- 7. Fuel tank
- 8. Rider seat

- 9. Passenger seat
- 10. Rear mudguard
- 11. Tail light
- 12. License plate holder
- 13. License plate light
- 14. Left rear turn signal
- 15. Left passenger footrest
- 16. Left rider footrest

- 17. Side kickstand
- 18. Gear shift lever
- 19. Radiator
- 20. Front mudguard

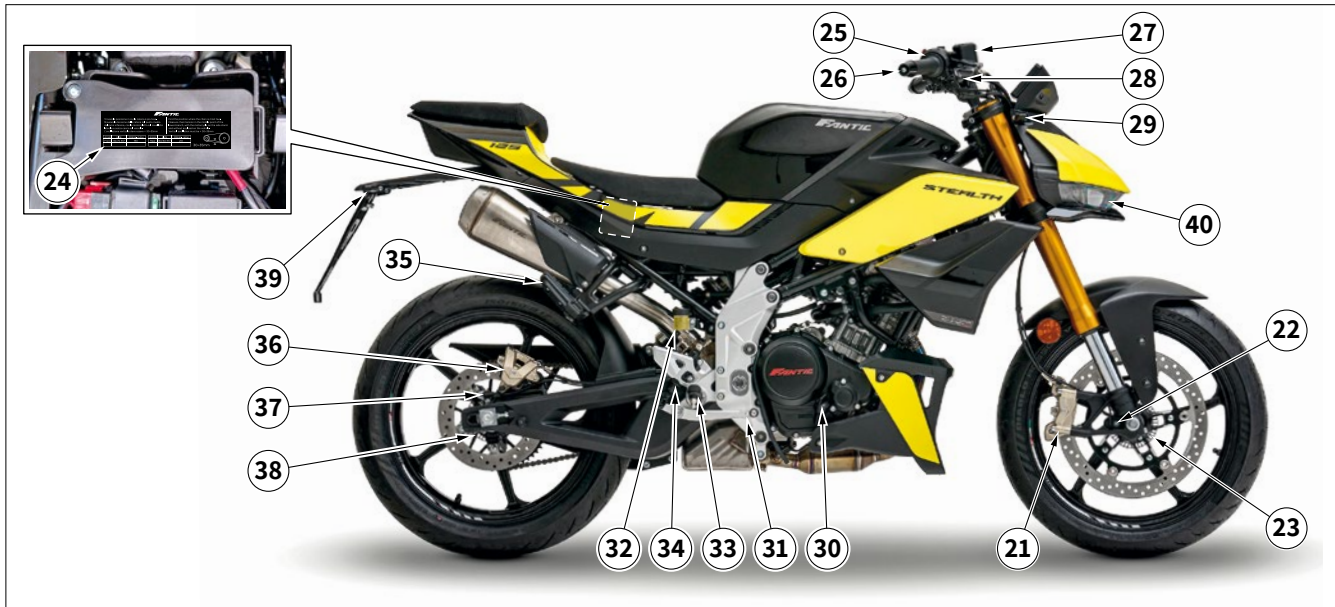


21. Front brake calliper
 22. Front speed sensor
 23. Front tone wheel
 24. Tire pressure and chain clearance
 indication label
 25. Right light stalk
 26. Gas command
 27. Front brake master cylinder

28. Front brake lever
 29. Right front turn signal
 30. Engine oil cap/dipstick
 31. Rear brake lever
 32. Rear brake oil tank
 33. Right rider footrest
 34. Rear brake master cylinder
 35. Right passenger footrest

36. Rear brake calliper
 37. Rear speed sensor
 38. Rear tone wheel
 39. Right rear turn signal
 40. Right headlamp

MAIN ELEMENTS AND DEVICES

PANEL COMMANDS

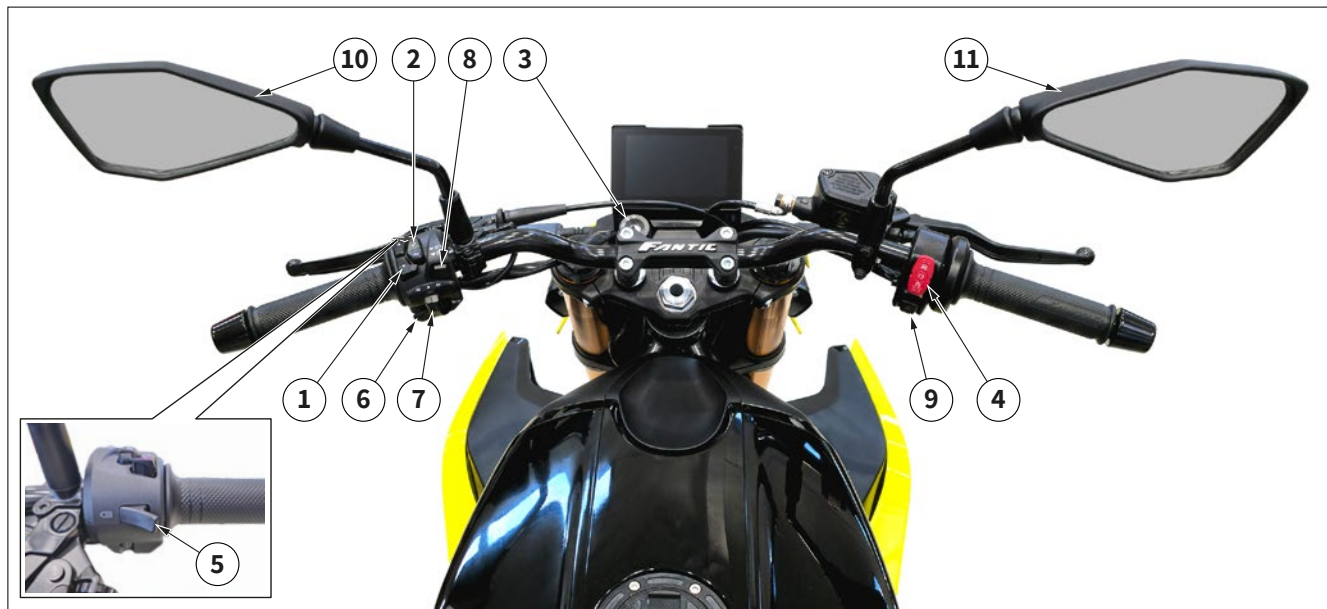

1. Navigation buttons
2. Selection buttons
3. Ignition switch
4. Engine stop/start button
5. High beam flashing button
6. Horn button
7. Turn signal switch
8. Low beam/high beam light switch
9. Emergency light switch


10. Left rear-view mirror
11. Right rear-view mirror

IGNITION SWITCH

The ignition switch is located at the front of the vehicle near the dashboard.

The functions of the ignition switch are the following:

- A. The vehicle is in "Parking" mode (Park): the position lights remain on with the engine off, making it visible when parked in dimly lit environments.
- B. The handlebar is locked and the vehicle cannot be started and the lights cannot be switched on. The key can be removed.
- C. The vehicle and the lights can not be operated and the key can be removed.

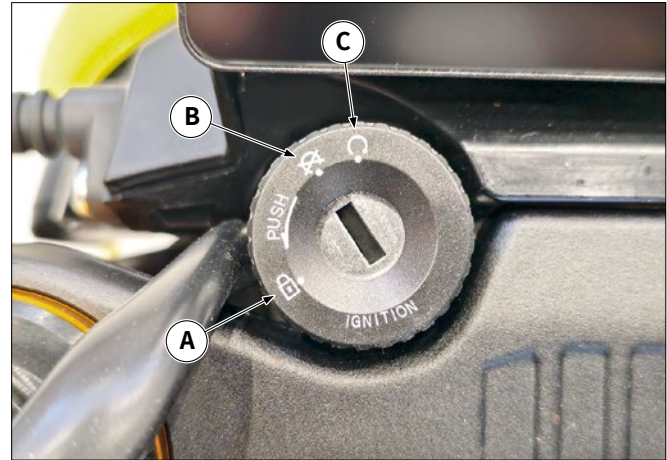

- i** The vehicle is delivered with two keys, one of which is spare. Keep the spare key in a place other than the vehicle.
- i** The lights switch off when the ignition switch is positioned on "B".
- i** The key is used not only for the ignition switch, but also for the tank cap and the seat opening.
- i** With the key in the (ON) position, the position lights turn on automatically. When the engine is started, the low beam lights turn on automatically.

DRIVING CONTROLS AND ADJUSTMENTS


STEERING LOCK ENGAGEMENT

Turn the key to position (OFF) "A".

Operate the side kickstand with your left foot and step off the vehicle.

Press and turn the key anti-clockwise to position "B", slowly turning the handlebar to the left or right until the steering lock engages.

Release the key and remove it from the ignition switch.

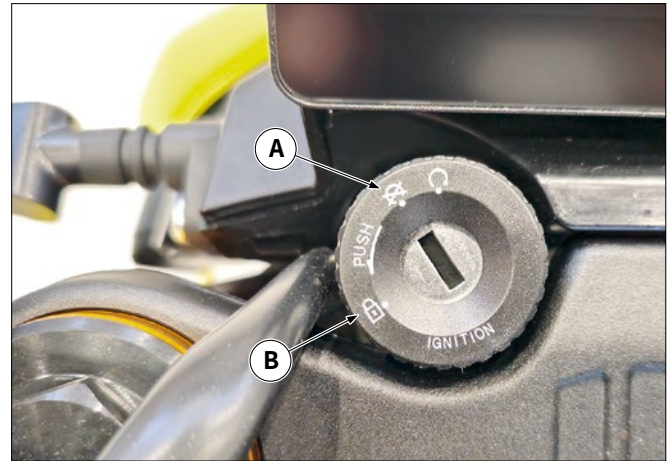

ENGINE STOP BUTTON

Pressing it stops the engine.

It has the function of a safety or emergency switch.



Do not intervene on the switch when the vehicle is running, this would cause the engine to stop. This could result in loss of control of the vehicle, increasing the risk of accidents and damaging things and/or people.



START BUTTON

With the key inserted and positioned to **(ON)**, with the gear lever in neutral and the engine stop function deactivated, the engine starts by pressing the start button.



EN

HORN BUTTON

Press to activate the horn.



DRIVING CONTROLS AND ADJUSTMENTS

TURN SIGNAL SWITCH

Position the switch to the left or right to indicate the turn.

Position the switch, bringing it to the centre position to deactivate the indicators.



LOW BEAM/HIGH BEAM LIGHT SWITCH

Press the light switch to activate the high beam.


Press the light switch again to return to the low beam.



HIGH BEAM FLASHING BUTTON

Pressing it activates the flashing of the high beam. It is usually used to indicate danger or emergency situations.

When the button is released, the high beam flashing is deactivated.

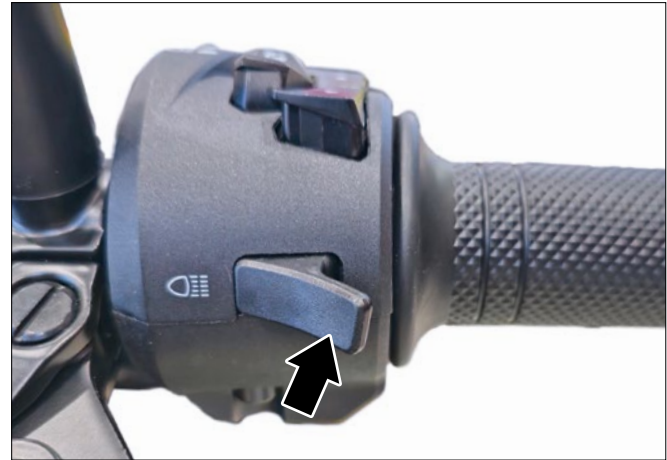

EMERGENCY LIGHT BUTTON

Press the button to activate the warning lights on both sides of the vehicle, creating a simultaneous flashing effect to increase visibility.

This helps other drivers recognize that there is an emergency situation or danger on the road.

Press the button again to deactivate the warning lights.




DRIVING CONTROLS AND ADJUSTMENTS

SUSPENSIONS

Front suspension

 **For the replacement of the front suspension oil, go to an authorized Fantic Motor Service Center.**

For maintenance intervals, refer to the "Scheduled maintenance plan" section under "Fork".

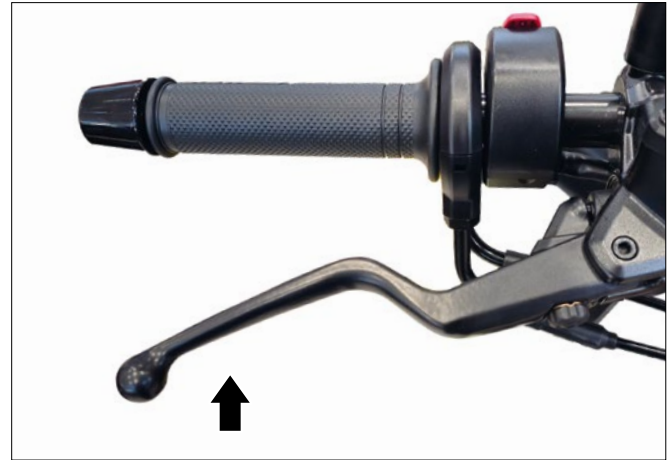

Check

Apply the front brake lever, push repeatedly on the handlebars, making the fork compress. The stroke must be gentle and there should be no traces of oil on the fork stanchions.

 **In the event that malfunctions are noticed or specialized personnel need to be contacted, go to an authorized Fantic Motor Service Center.**

Adjustment

This type of suspension does not require any type of adjustment. The basic setting of the suspension is done by Fantic Motor.



Rear suspension


For maintenance intervals, please refer to the "Scheduled maintenance plan" section under "Rear shock absorber".

The rear wheel suspension is composed of a shock absorber unit connected in the upper part to the frame and in the lower part to the swingarm.

Shock absorber preload adjustment

The basic suspension setting (spring preload) "A" is adjusted by Fantic Motor:

 **143.5 mm (5.65 in).**

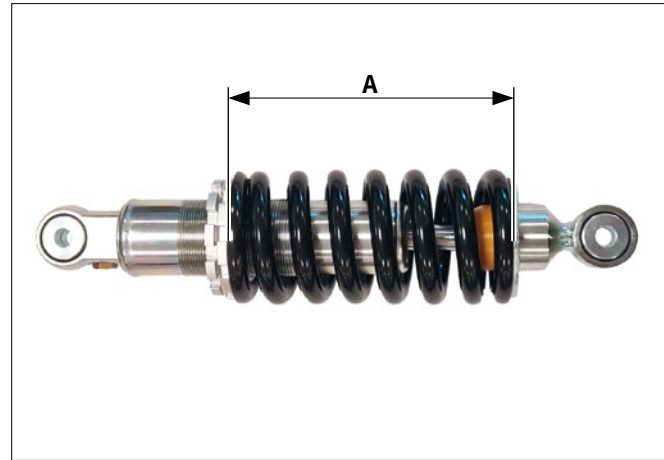

 **If you do not have the necessary technical knowledge to carry out this adjustment, it is recommended that you contact an authorised Fantic Motor Center to avoid damage to the vehicle or compromising driving safety.**

 **To perform this procedure, it is necessary to use:
No. 2 hook wrenches.**

For special use requirements relating to the road surface or vehicle load, it is possible to adjust the spring preload, observing the following limits (dimension "A" measurement):

 **MINIMUM: 150 mm (5.91 in).
MAXIMUM: 137 mm (5.39 in).**

 **Make sure the engine is completely cold before adjusting.**

DRIVING CONTROLS AND ADJUSTMENTS

- Using two hook wrenches, loosen the retaining ring nut "1" and turn the ring nut "2" until it reaches the desired position.



Outer diameter of locknuts:

Ring nut "1": 67 mm (2.64 in).

Ring nut "2": 63 mm (2.48 in).


- Measure the preload dimension of spring "A", checking that it is within the specified limits.
- Tighten the retaining ring nut "1" again.



When adjusting the adjustment ring nuts, take particular care when handling the hook wrenches, in order to avoid the risk of injuring yourself by hitting other parts of the vehicle.




Do not force the rotation of the adjusters beyond the limits set by Fantic Motor, to avoid possible damage.

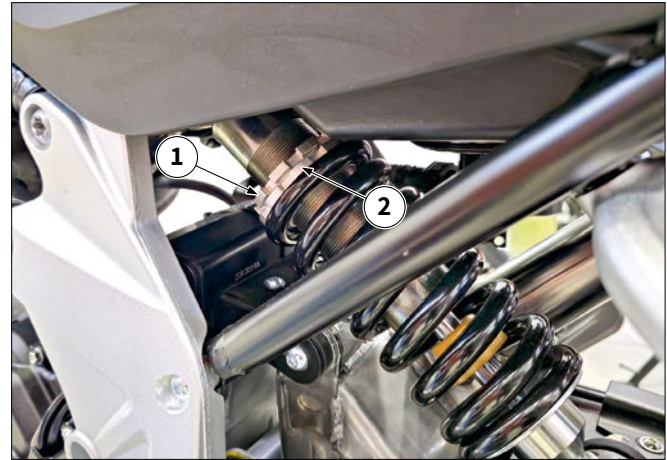

FRONT BRAKE LEVER ADJUSTMENT

The control lever is equipped with a ring nut “A” for adjusting the distance of the lever from the grip on the handlebar.


Turning the ring nut clockwise moves the lever away from the throttle grip. Conversely, turning the lever anti-clockwise brings it closer.

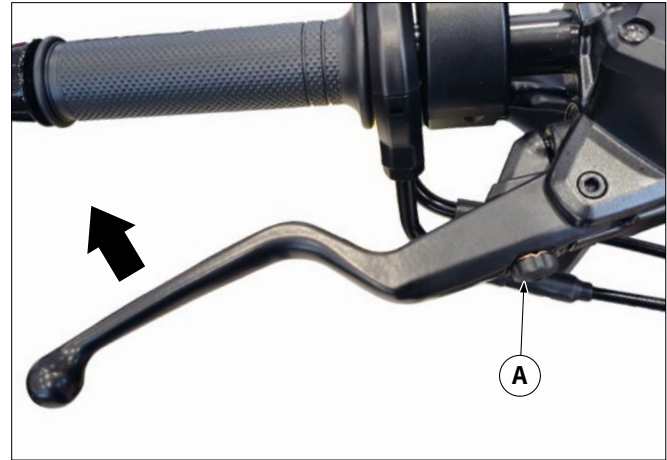

CLUTCH LEVER ADJUSTMENT

The control lever is equipped with a ring nut “A” to adjust the distance of the clutch lever from the handlebar grip.

By pushing the lever outwards, it is possible to turn the ring nut “A” clockwise or anticlockwise to adjust the distance of the lever from the grip, thus adapting it to the rider’s needs.

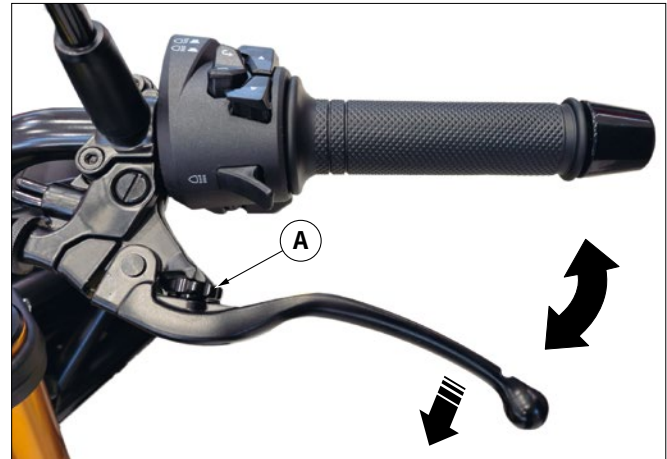

DRIVING CONTROLS AND ADJUSTMENTS

HEADLIGHTS AND TURN SIGNALS

To disassemble, check and/or replace the headlights, tail light, licence plate light and turn signals, contact an authorised Fantic Motor Centre.


HEADLIGHTS ALIGNMENT

- i** The procedure described is established by the “Italian Regulation” regarding the maximum height of the light beam. Adjust the procedure to comply with the regulations in force in the country where the motorcycle is used.
- i** It is recommended to have two people for headlights adjustment.
- i** If you are not confident in correctly performing the headlights adjustment, it is advisable to contact an authorised Fantic Motor Centre.

To verify the correct alignment of the front headlights, proceed as follows:


- Position the vehicle, with the tires inflated to the correct pressure and a person seated on the saddle, against a wall on flat and perpendicular ground.
- Mark the points on the wall corresponding to the center of the headlights.
- Move the vehicle back to a distance of 10 m (32.8 ft) from the wall.
- Check that the light beam projected onto the wall is 10 cm (0.33 ft) below the previously marked point on the wall.

If the headlights alignment is incorrect, proceed with the adjustment.

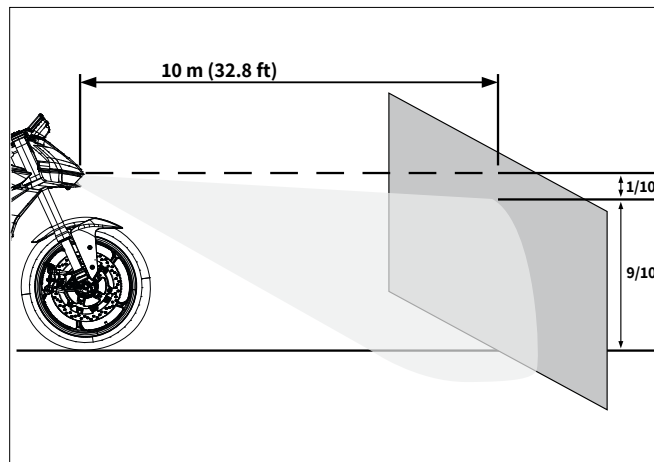


Headlights adjustment (Option 1)

Turn the handlebars left to access the adjustment screw “A” for the right headlight and adjust the height of the headlight by turning the screw until the optimal beam position is reached. Then, turn the handlebars right to access the adjustment screw for the left headlight and perform the same operation to obtain the optimal beam position for the left headlight as well.

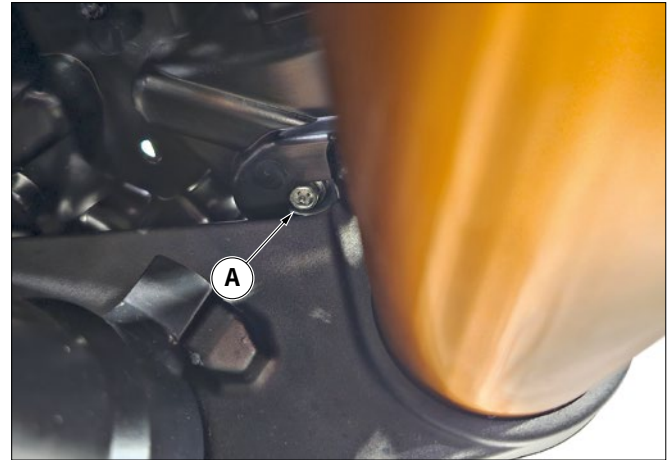

Headlights adjustment (Option 2)

Act directly on the adjustment ring “B” (one for each headlight), located below the headlights. Use a cross-head screwdriver to adjust each ring until the optimal beam position is reached.

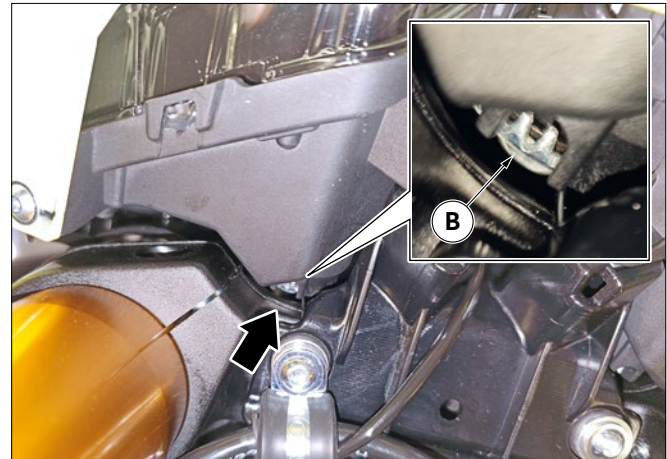

DRIVING CONTROLS AND ADJUSTMENTS

REAR-VIEW MIRRORS

Rear-view mirror removal

- i** The operations described below apply to both rear-view mirrors.

Place the vehicle on the side kickstand making sure it is on a flat and stable surface.

Loosen the lock nut “A” and turn the mirror counterclockwise and remove it.


- i** During reassembly, before tightening the nut, check that the mirror support rod is aligned with the handlebar.





Rear-view mirror adjustment

- i** The operations described below apply to both rear-view mirrors.

Sit in the vehicle in the driving position and adjust the mirror to suit your needs.

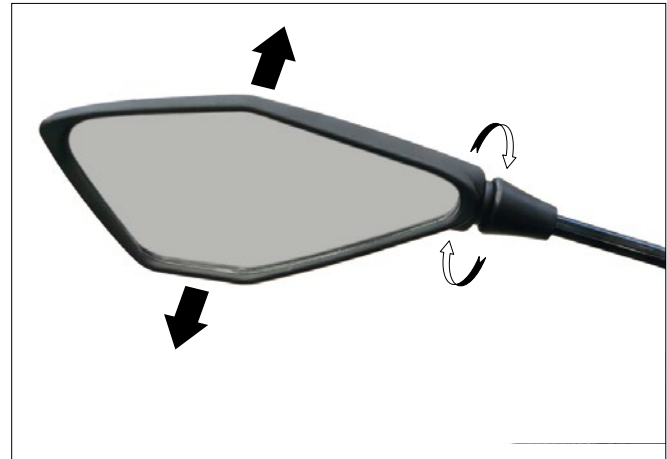

DIGITAL DASHBOARD

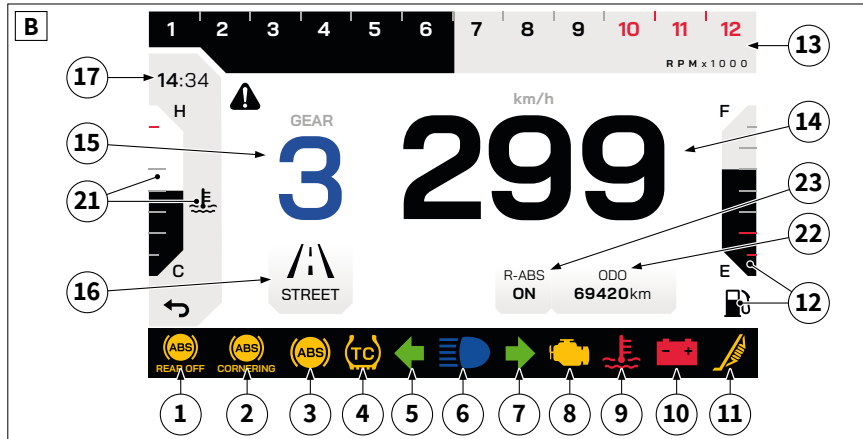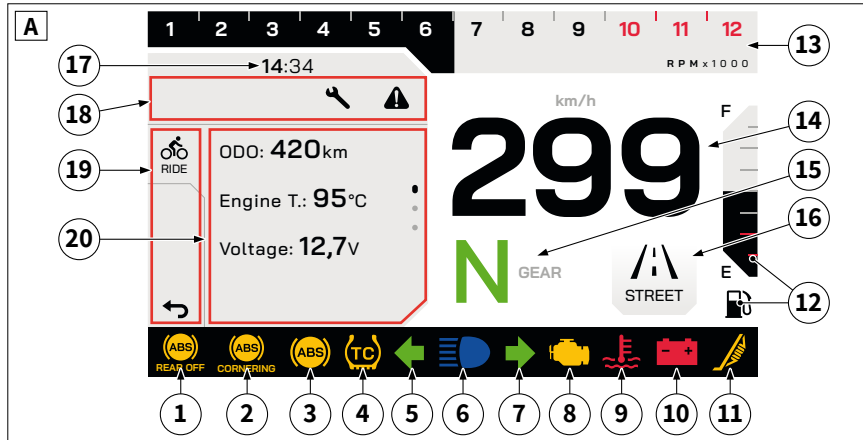

- A. Full display mode
- B. "RACE" display mode

1. Anti-lock Braking System (ABS) indicator light (amber)
2. ABS Cornering indicator light (amber)
3. ABS operating status indicator light (amber)
4. Traction control (TC) indicator light {not available} (amber)
5. Left turn signal / hazard warning signal (green)
6. High beam indicator light (blue)
7. Right turn signal / hazard warning signal (green)
8. Malfunction indicator light (MIL) (amber)
9. High coolant temperature indicator light (red)
10. Battery voltage fault indicator light (red)
11. Side kickstand indicator light (amber)
12. Fuel level
13. Tachometer
14. Speedometer
15. Gear indicator
16. Riding mode
17. Clock
18. Notification area
19. Information/multimedia selection area
20. Main information window
21. Coolant temperature
22. Odometer
23. ABS operation on rear wheel

EN

DASHBOARD

Anti-lock Brake System (ABS) indicator lights



When the key is turned to the ON position , all dashboard lights come on for 5 seconds. Following this, **ABS** indicator light "3" flashes at low speed, then goes out after the ABS control unit has performed all necessary checks.

If the message "No ABS Communication" appears in the information window, all indicator lights ("1", "2", "3") come on steady.

- i** Try switching the vehicle off and on again and if the message persists, contact a Fantic Authorised Center as soon as possible to have the ABS systems checked.

In the presence of any other ABS-related fault or error, **ABS** indicator light "3" starts flashing at high speed.

- !** If there is a malfunction with the ABS system, proceed with extreme caution and contact an authorised Fantic Motor Center as soon as possible to check and correct the problem.

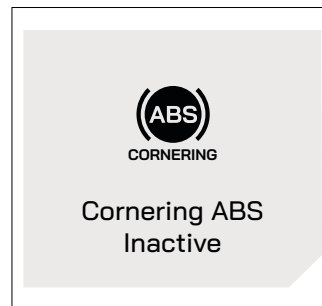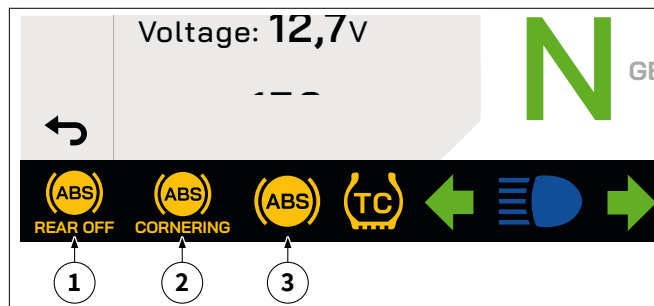

ABS REAR OFF indicator light "1" illuminates when the anti-lock control on the rear wheel has been deactivated.

- i** If the inertial platform (Kit "IMU") is present, when the anti-lock braking control on the rear wheel (R-ABS) is deactivated, the ABS Cornering system is also deactivated, so the corresponding indicator light "2" also comes on.

- !** If you have not chosen a riding mode that deactivates the R-ABS, proceed with extreme caution and contact a Fantic Motor Authorised Centre as soon as possible for an ABS systems check.

The **ABS Cornering** "2" indicator light comes on when the system is malfunctioning or if the wrong ECU software has been installed: the message "Cornering ABS Inactive" appears in the information window.



i The "ABS cornering" control system is optional and requires the "IMU" kit installed on the vehicle.

! If the ABS system or part of it is not fully functional, the vehicle retains a conventional braking system. Reduce the speed and contact an authorized Fantic Motor Center.

In the event of a programming error in the engine control unit, a malfunction could occur in all the vehicle's control units.

In this case the message "System Check" appears and the indicator lights "ABS Cornering" and "Traction Control" light up and remain steady.

! If the message "System Check" appears, contact an authorised Fantic Motor Center as soon as possible to have the vehicle checked.

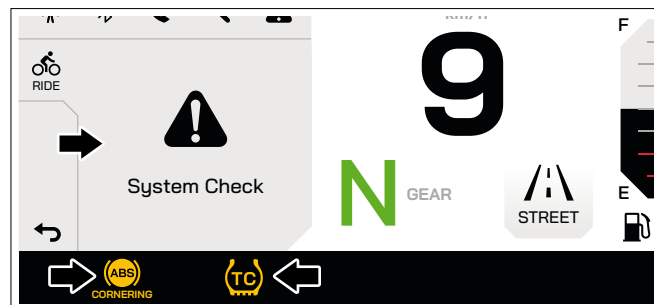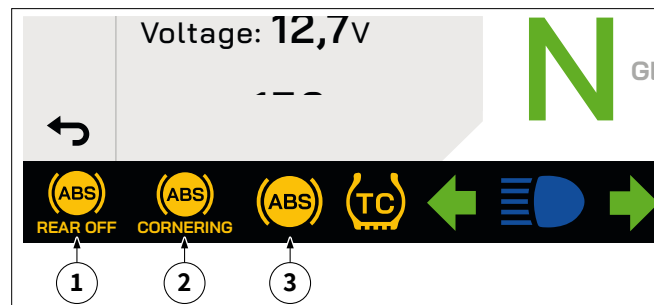

DASHBOARD

Side kickstand indicator light

The side kickstand indicator light comes on when the side kickstand is down, or when it is down with a gear engaged. In this case, the engine is automatically switched off to prevent damage or accidents. If the motorcycle is in neutral, the engine does not switch off even if the side kickstand is down.


- i** **Raise the side kickstand before starting the engine and riding.**



Malfunction Indicator Light (MIL)

The Malfunction Indicator Light "MIL" comes on when the vehicle system detects a fault in the engine or electronic components. If the indicator light illuminates, it is advisable to have the motorcycle checked at an authorised Fantic Motor Center as soon as possible.


- !** **Continuing riding with the indicator light on could damage the engine or increase emissions.**

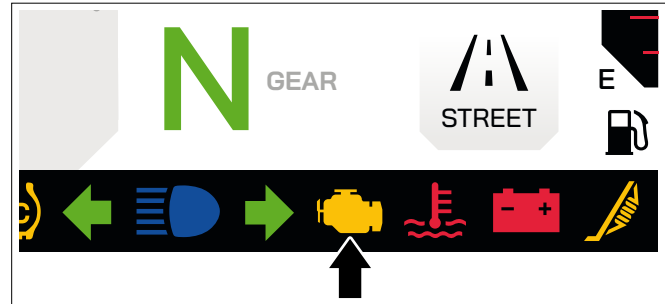

High beam indicator light

The high beam indicator light comes on when the motorcycle's high beam lights are on. This indicator serves to remind the rider that the headlights are set to illuminate the road at long distances, and not for use in heavy traffic conditions or when other vehicles are passing.


- i** **It is important to switch off high beam headlights when they are not needed to avoid dazzling other drivers.**

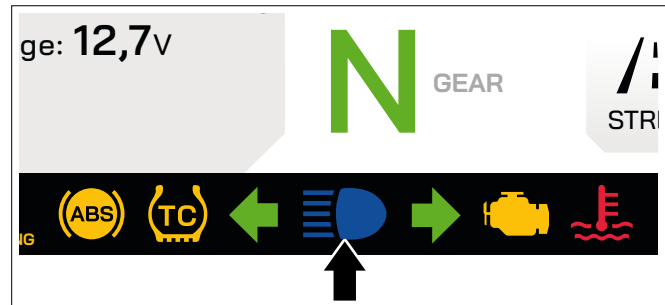

Low fuel level indicator light

When the fuel level falls below the penultimate mark, indicator light "1" turns amber, the level gauge bar turns red, and the message "Low fuel level" appears in the information window. The indicator lights return to their original state as soon as refuelling takes place.

 **We recommend refuelling as soon as possible.**

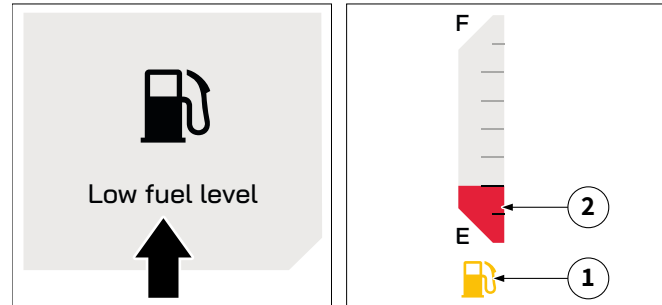


Battery voltage failure indicator light

The battery indicator light comes on when the voltage level detected is too low or too high.

Depending on the fault detected, the corresponding message appears in the information window:

- voltage too low : "Low battery voltage" message;
- voltage too high/wrong: "Hight battery voltage" message.

 **Under these conditions, it is recommended that you contact an authorised Fantic Motor Center to have the battery checked and/or replaced.**

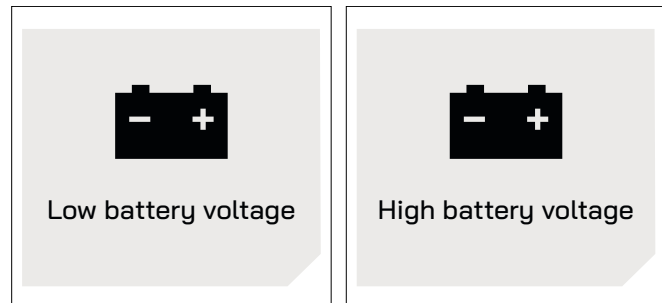

DASHBOARD

Coolant temperature indicator light

The coolant temperature indicator "1" lights up and the message "Over temperature" appears in the information window, when the coolant temperature reaches:

102 °C (215 °F)


 **In this condition, it is necessary to stop immediately and switch off the engine to avoid damage.**

 **Check the coolant level and wait for the engine to cool down before resuming driving.**

 **If the problem persists, contact an authorised Fantic Motor Center.**

With the "RACE" display mode active, the coolant temperature indicator bar "2" is visible.

When the engine temperature exceeds the danger threshold, the last two levels of bar "2" and indicator light "3" turn red.

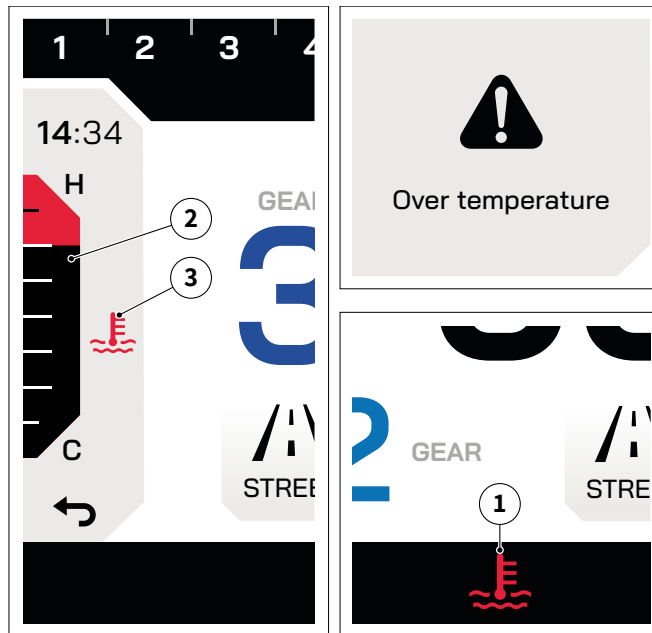

Notification area icons


The following icons may appear in the notification area:

Icon	Description	Notes
	Deadline for the next scheduled maintenance service expired.	Refer to the scheduled maintenance plan.
	Generic alarm.	Access the notification center as described on page 56.

DASHBOARD

DASHBOARD CONTROLS

When the ignition switch is turned to the **ON**  position, all modes and indicator lights are displayed for a fraction of a second.

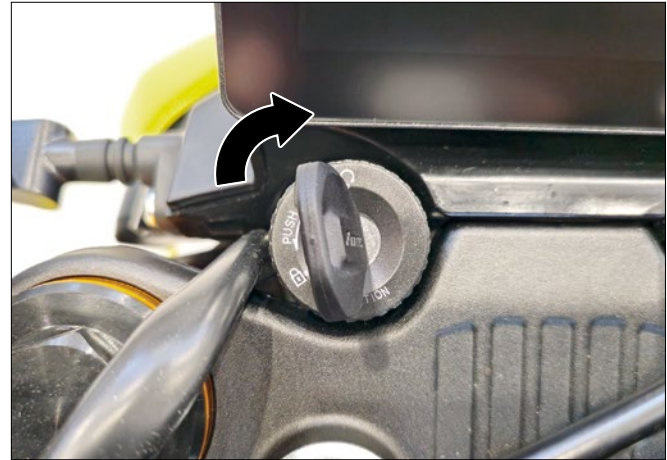

On the left light stalk there are the control buttons for the digital dashboard:

1. up button "**UP**" ▲ ;
2. down button "**DOWN**" ▼ ;
3. set button "**SET**" ✓ ;
4. back button "**BACK**" ↶ .

The **UP** and **DOWN** buttons allow menu navigation, while the **SET** and **BACK** buttons allow the various settings to be selected or cancelled.




DISPLAY MODE SELECTION

The dashboard provides two ways of displaying information:

1. Full mode (standard);
2. "RACE" mode

Briefly press the **BACK** button  to switch from one display mode to the other and vice versa.

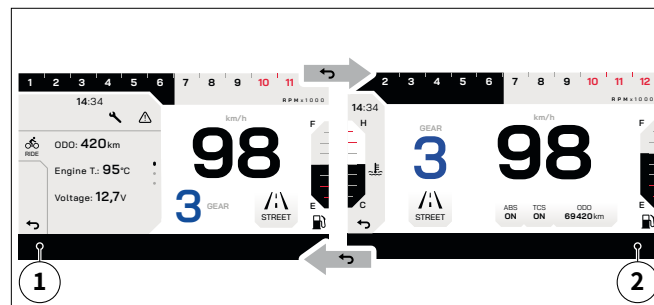

RIDING INFORMATION MENU (RIDE)



The user can see all the main information on the dashboard by scrolling through the different windows in full view mode.

Briefly press the **UP** ▲ and **DOWN** ▼ buttons to scroll through the information windows:

1. "RIDE", with general information:
 - Odometer
 - Engine temperature
 - Battery voltage
2. "TRIP A", with data recorded for trip A:
 - Distance travelled
 - Average speed
3. "TRIP B", with data recorded for trip B:
 - Distance travelled
 - Average speed

To reset the values for TRIP A and TRIP B, press and hold the **BACK** button .

 This information is visible with the ignition switch set to ON  and during normal riding of the vehicle.

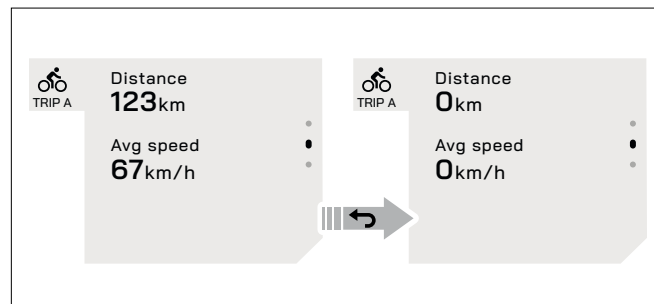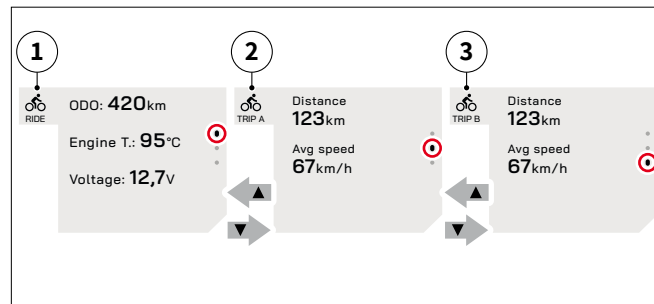


DASHBOARD

RIDING MODE SELECTION

The vehicle allows a choice of the following riding modes:

- "STREET" (default)
- "TRACK"

 **To select and change the riding mode, the vehicle must be stationary.**

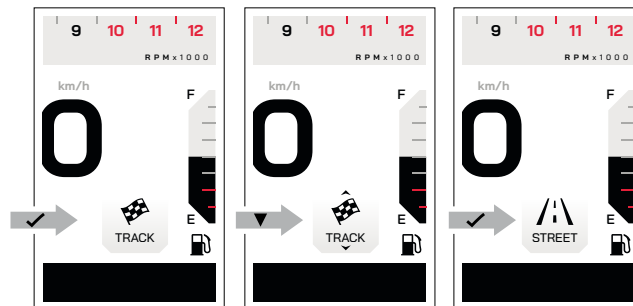

Proceed as follows:

- Press the **SET** button  **briefly to activate the riding mode selection.**
- Selection arrows appear on the mode frame and by pressing the **DOWN**  button it is possible to change the mode among those available.
- Press the **SET**  button again to confirm the chosen mode.

 **Each time the riding mode is changed, wait a few seconds for the motorbike to make all the necessary changes.**



RIDING MODE		ABS	Information visible on the dashboard
STREET	 STREET	Active	No message present / no indicator light active
TRACK	 TRACK	Not active on rear wheel "ABS Cornering" option not active (*)	Message "ABS Cornering inactive" (*) present "ABS Rear" and "ABS Cornering" indicator lights (*) active

 **Note (*) : Only available with the "IMU" kit installed on the vehicle.**

- i** With each mode change, the dashboard performs a check of the various systems.
- !** The appearance of the danger signal "1" (red) at the selected riding mode indicates an error and/or malfunction of the riding mode.
- i** In the RACE display mode, in addition to the danger signal "1", the detected error indication "2" (red) also appears.

If an error occurs, try resetting the mode. If the error persists, try switching the vehicle off and on again and retry the riding mode setting.

- !** If the presence of the error signal on the mode persists, it is recommended to proceed with the utmost caution, as some safety systems may not function correctly, and to visit an authorised Fantic Motor Center as soon as possible for the necessary checks.

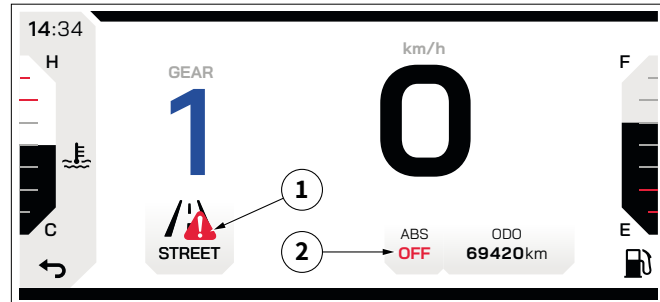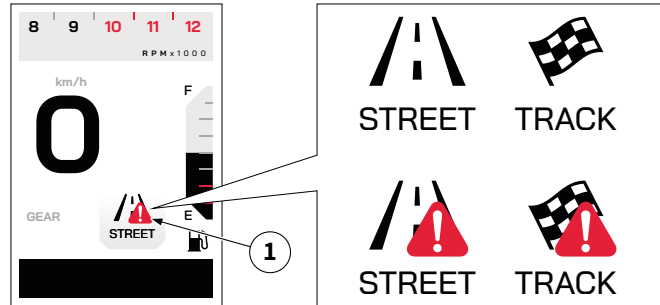

DASHBOARD

ACCESSING THE SETTINGS MENU

To access the dashboard settings menu, proceed as follows:

- stationary vehicle;
- ignition key to ON  (dashboard on);
- long press the SET  button.

The user can navigate the settings menu by using the **UP**  and **DOWN**  buttons to scroll through the proposed items and press the **SET**  button to access the selected item.

Long press the **BACK**  button to exit the settings menu.






Notification Centre

In this section it is possible to check the remaining km and the due date of the next scheduled maintenance "1" and the summary of the last 3 warning messages generated "2".

-  **If the problems that generated the error messages persist, these messages remain visible within the notification centre, even if the dashboard is restarted.**

When the remaining KM are exhausted or the expiry date is exceeded, the maintenance symbol "3" appears and remains visible in the notification area.


-  **When one or more warning messages are present, the warning symbol "4" appears in the notification area.**

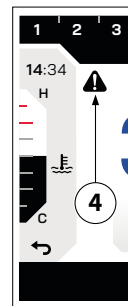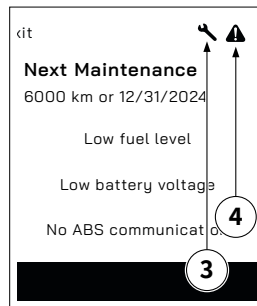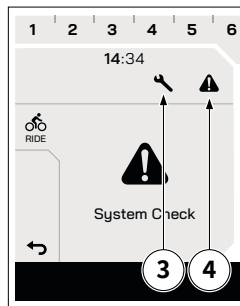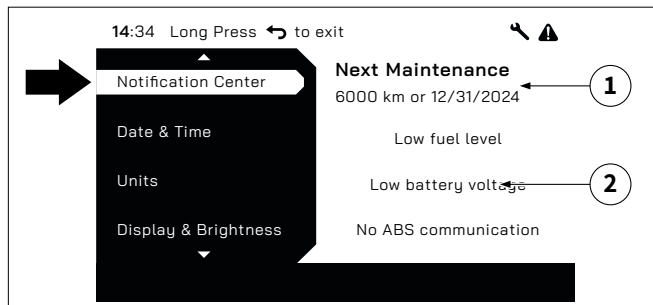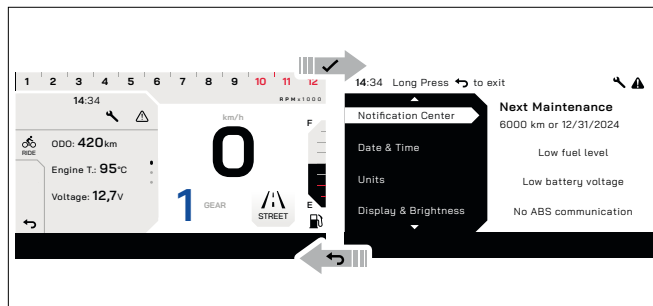

Date & Time

In this menu screen, the user can set, sequentially:

- Hours;
- Minutes;
- Day;
- Month;
- Year;
- 24H time format (ON/OFF).


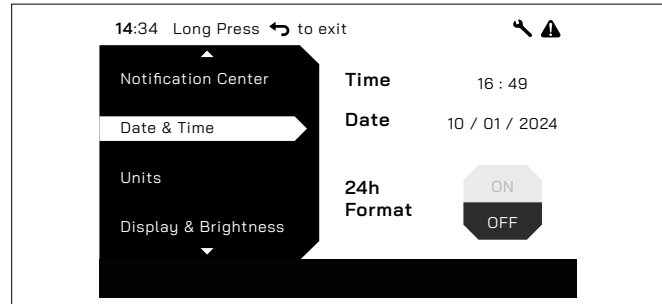


Press the **SET** ✓ button to start the time, date and time format setting procedure.

Press the **UP** ▲ and **DOWN** ▼ buttons to scroll through the **hour** numbers and press the **SET** ✓ button to confirm.


Continue by setting the **minutes** of the time and likewise set the **day**, **month** and **year** for the date.

i Pressing and holding the **UP** ▲ and **DOWN** ▼ buttons automatically scrolls the time and date digits.

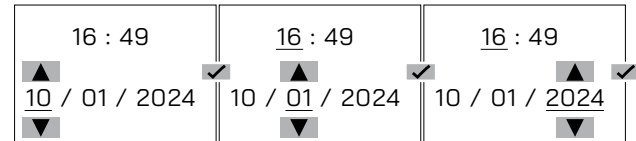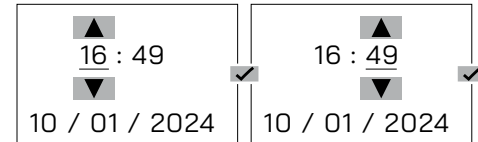

Finally, press the **UP** ▲ and **DOWN** ▼ buttons to change the time format and confirm by pressing **SET** ✓, concluding the date and time setting procedure.

- **ON** = 24H time format
- **OFF** = time format 12H AM/PM

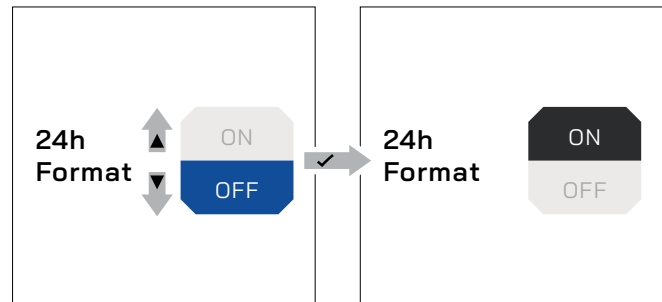

DASHBOARD

Units



In this menu screen, the user can set, sequentially:

- The unit of measurement of distance and speed;
- The unit of measurement of temperature.

Press the **SET** ✓ button to start the unit setting procedure.

Press the **UP** ▲ and **DOWN** ▼ buttons to choose between the measurement unit in "Km" (kilometres) or "Miles" (miles), then press the **SET** ✓ button to confirm.

Continue by setting the temperature unit between "°C" (degrees Celsius) and "°F" (degrees Fahrenheit), then press the **SET** ✓ button to confirm and finish.

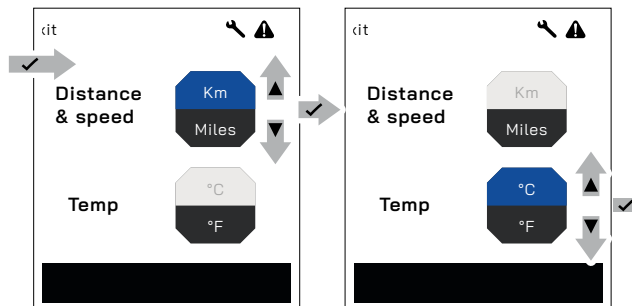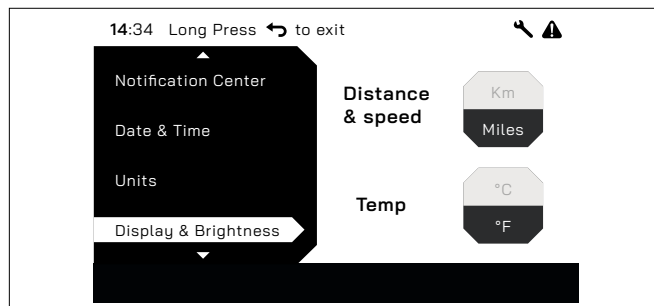

Display & Brightness

In this menu screen, the user can choose the graphic theme and set the brightness of the display.

The user can choose from the following themes:

- Automatic ("Auto")
- Light ("Light")
- Dark ("Dark")

i The automatic theme automatically manages the theme according to day and night and the brightness according to ambient brightness.





Press the **SET** ✓ button to start the dashboard brightness setting procedure.

i The choice of "Light" and "Dark" themes allows to set the brightness level of the display.

Press the **UP** ▲ and **DOWN** ▼ buttons to select the desired theme and press the **SET** ✓ button to confirm.

After selecting the "Light" or "Dark" theme, the brightness level of the display must be set.

Press the **UP** ▲ and **DOWN** ▼ buttons to set the desired level and confirm by pressing the **SET** ✓ button.

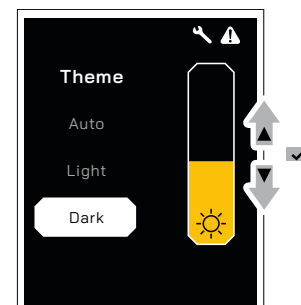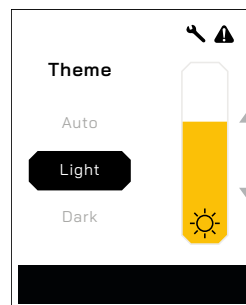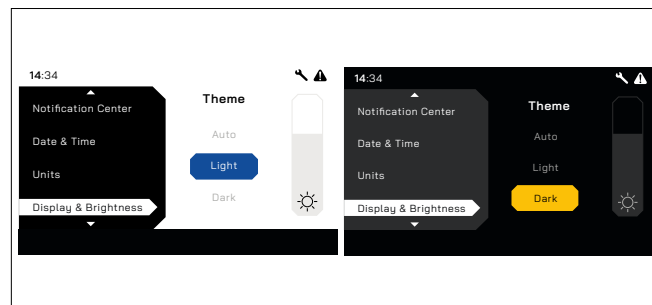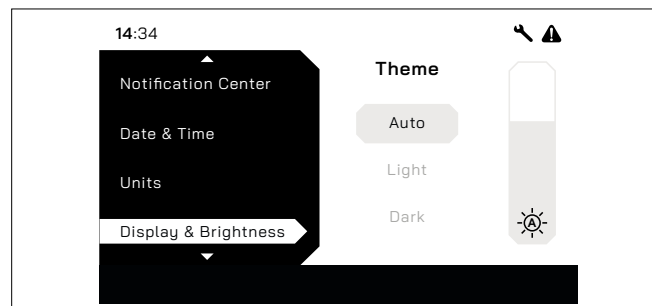

DASHBOARD

WARNINGS AND ERRORS DISPLAYING

The dashboard handles the reporting of warnings and errors in real time, in order to allow the detection of any abnormal behaviour of the vehicle.



Instant messages displaying

The dashboard displays the relevant message in information window "1" with the full display and in the middle of screen "2" with the "RACE" display.

The user can delete the instant message by pressing the **SET** ✓ button or the **BACK** ↩ button.

Warning icon

On the dashboard, after an instant message appears, the warning icon "3" ⚠ appears as a reminder of the presence of the error.

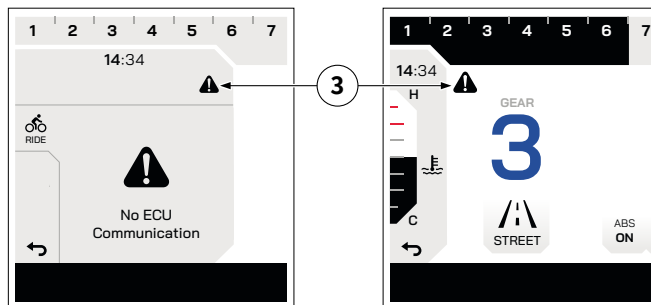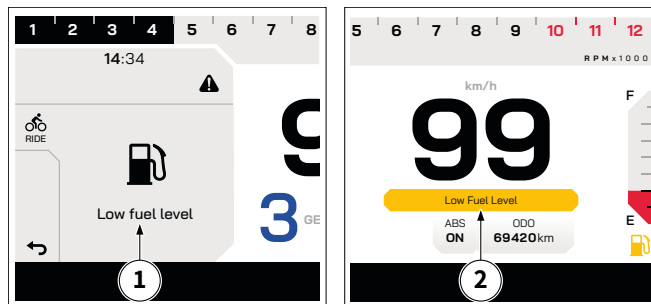


Messages in the notification centre

⚠ **Only the last 3 messages reported by the dashboard, in chronological order, are recorded in the notification centre.**

⚠ **Previously reported errors, the causes of which are persistent, remain in the message centre.**

The user can check these messages by consulting the notification centre, which can be accessed by following the instructions provided at page 56.

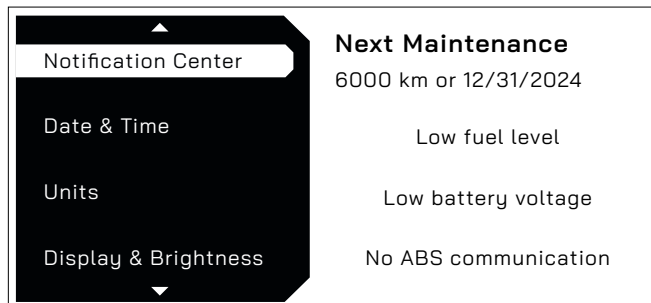

Error messages list

Message	Cause	Solution
System Check	Vehicle ECU software error.	Proceed with caution with standard braking system. Contact your authorised Fantic Motor workshop.
No communication with ECU ("No ECU Communication")	Engine control unit error.	Proceed with caution without traction control. Contact your authorised Fantic Motor workshop.
No communication with ABS ("No ABS Communication")	"ABS" control unit error.	Proceed with caution with standard braking system. Contact your authorised Fantic Motor workshop.
ABS Cornering not active ("Cornering ABS Inactive")	"ABS Cornering" Option Error.	Proceed with caution without ABS Cornering. Contact your authorised Fantic Motor workshop.
RUNOFF	RUNOFF switch active.	Deactivate RUNOFF before starting vehicle.
Low fuel level ("Low fuel level")	Refuelling required.	Add fuel.
Over temperature ("Over temperature")	High engine temperature.	Stop, wait for the engine to cool down. Check engine coolant level. Contact your authorised Fantic Motor workshop.
Low battery voltage ("Low battery voltage")	Battery voltage level too low.	Proceed with caution. Contact your authorised Fantic Motor workshop.
High battery voltage ("High battery voltage")	Battery voltage level too high.	Proceed with caution. Contact your authorised Fantic Motor workshop.

DASHBOARD


ENGINE STOP / START

- ① Only operate the engine stop switch when the vehicle is stationary in order to avoid damage to the engine and safety risks for the rider.

With the vehicle stationary, when the engine stop switch "1" is actuated, "RUNOFF" appears in the main information window.

- ② When the vehicle is in "RUNOFF" mode, the settings on the digital dashboard can be changed.

With the vehicle stationary, when engine start switch "2" is actuated, the word "RUNOFF" in the main information window disappears.

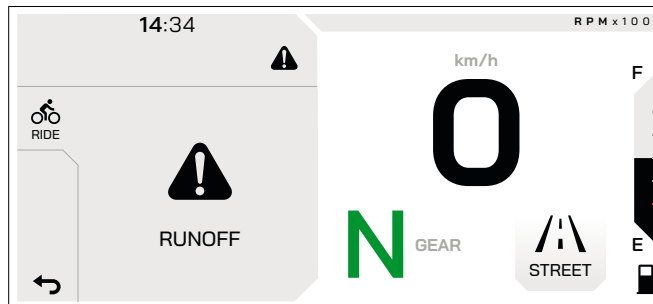

IMPORTANCE OF ROUTINE MAINTENANCE

Proper vehicle maintenance is essential to ensure safety, protect your investment, achieve optimum performance, prevent breakdowns and reduce air pollution. The **customer** is responsible for carrying out the following checks before each use of the vehicle, ensuring that no problems or malfunctions occur.

-  **ALWAYS contact an Authorized Fantic Motor Center if malfunctions or anomalies are found.**
-  **Improper maintenance or failure to fix a problem before riding can lead to accidents with serious injury or death. It is essential to follow the advice and maintenance schedules given in this manual, and to carry out inspections before starting to avoid damage to the vehicle and serious injury to the rider and passenger.**
-  **If the user does not have the necessary technical skills or the appropriate tools to carry out routine maintenance, it is recommended to contact a Fantic Motor Authorised Center.**
-  **If technical advice or service is required, contact an authorised Fantic Motor Center.**

SAFETY RULES FOR ROUTINE MAINTENANCE

-  **Always read the instructions on routine maintenance before any inspection or work on the vehicle.**

When carrying out maintenance work, the following guidelines must be observed:

- Switch off the engine and make sure the key is removed.
- Park the vehicle on a firm, level surface, supporting it with the side kickstand or a safety stand for maintenance.
- To avoid burns, allow the engine, silencer, brakes and other components subjected to high temperatures to cool down before servicing.

-  **Failure to follow these procedures can result in serious injury to persons and to the vehicle.**
-  **It is recommended to contact an authorised Fantic Motor Center for the availability of genuine Fantic Motor parts, as these guarantee reliability and safety. The use of non-original components may cause damage to the vehicle and endanger the safety of the driver and passenger.**

ORDINARY MAINTENANCE OPERATIONS

VERIFICATION OPERATIONS TO BE CARRIED OUT BY THE CUSTOMER

i The proposed mileage intervals are purely indicative. In the case of heavy and/or special use, carry out visual and functional checks on the vehicle before further use.

Component	Operation		Before each use	Every 500 km	Every 1500 km	Before a long stop	After a prolonged stop
Lights, turn signals, stop lights and horn	- Check the operation.	-	✓				
Clutch lever	- Check the clearance.	p.78	✓				
Braking system	- Check the brake fluid level.	p.72		✓			
	- Check the brake pad wear level.	p.73			✓		
	- Brake system check.	p.74	✓				
Engine oil	- Level check.	p.65		✓			
Coolant	- Level check.	p.70		✓			
Drive chain	- Check the wear and tear condition. - Check the clearance and elongation..	p.75		✓			
	- Lubrication and cleaning.	p.76		✓			
Complete vehicle	- Cleaning.	p.87		✓		✓	
Battery	- Disconnect and re-establish the connection.	p.82				✓	✓
	- Terminals cleaning.	p.83					✓
Tires	- Check the air pressure.	p.67		✓		✓	✓
	- Check for damage and tread depth.	p.67			✓		

ENGINE OIL

- ⚠ Engine oil consumption and quality may deteriorate with riding conditions and over time. It is recommended to rely on an authorised Fantic Motor Center for engine oil and filter removal and change.
- ⚠ When checking and topping up oil, pay attention to hot components, such as the engine and exhaust system.
- ⚠ Do not mix oils of different grades and brands, as this can impair lubrication and clutch operation. Use exclusively the products recommended in the "Recommended products table" section.

Engine oil check and top up

- ① To find out the mileage and/or time interval for carrying out this check, refer to the "Verification operations to be carried out by the customer" section.

Start the engine and let it idle for a period between 3 and 5 minutes.

Turn off the engine and wait for 2 or 3 minutes.

Place the vehicle upright on a firm, level surface.

Completely unscrew the oil level plug/ dipstick and clean it. Insert the cap/level dipstick again without screwing it in.



ORDINARY MAINTENANCE OPERATIONS


Remove the oil level plug/dipstick and check. The correct level is between the "MIN" (minimum) and "MAX" (maximum) marks.

⚠ The oil level must not go beyond the "MAX" mark and must never be below the "MIN" mark, in order not to damage the engine.

If, after checking, the engine oil level is below the "MIN" (minimum) mark, add recommended engine oil, if it exceeds the "MAX" (maximum) mark, contact an authorised Fantic Motor Center.

⚠ Avoid spilling oil when topping up. If a funnel or other instrument is used, make sure it is properly cleaned to avoid contaminating the engine oil.

Screw the oil level cap/dipstick back on firmly.

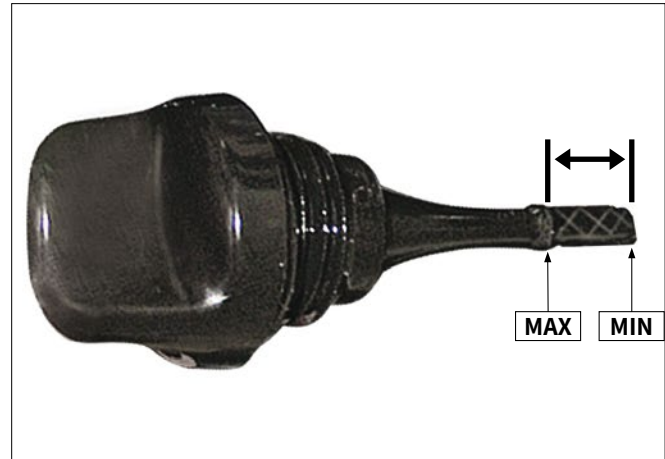

TIRES

For type and inflation pressure, refer to the "Technical Data" chapter.

i To find out the mileage and/or time interval for carrying out these checks, refer to the "Verification operations to be carried out by the customer" section.

Air pressure check

The tire pressure should be checked at room temperature, i.e. after at least three hours of parking or a maximum distance of **2 km (1 mi)**, as measurement with warm tires can be inaccurate.

i When checking the air pressure, be sure to use a correctly calibrated pressure gauge.

⚠ Check that the pressure valves are always fitted with protective caps and that they are properly closed to avoid sudden tire deflation.


⚠ Driving with tires with incorrect inflation pressure can lead to an accident resulting in serious or fatal injury.

Damage and tread depth check

Check whether the tires are:

- Cut.
- Slotted.
- Cracked so as to expose inner fabrics.
- Presence of nails or other foreign bodies embedded in the sides or tread.
- Presence of protuberances or bulges on the side walls of the tires.

If one or more of these defects are found, the tires must be replaced immediately.

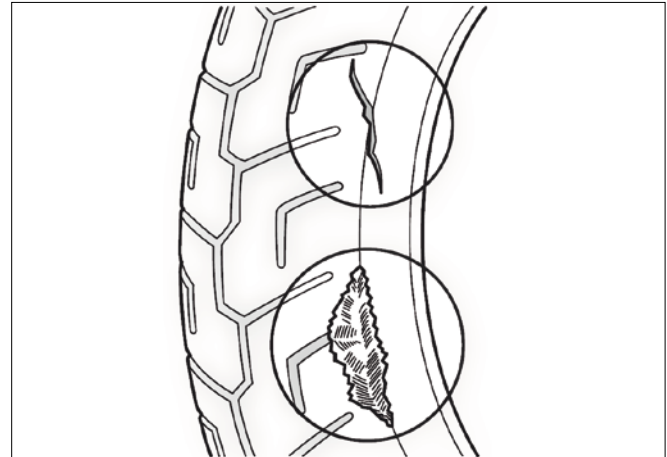


ORDINARY MAINTENANCE OPERATIONS

Check the tires for signs of abnormal wear on the contact surface.

If this defect is found, the tires must be replaced immediately.

 **Riding with damaged and/or excessively worn tires can lead to an accident resulting in serious or fatal injury.**

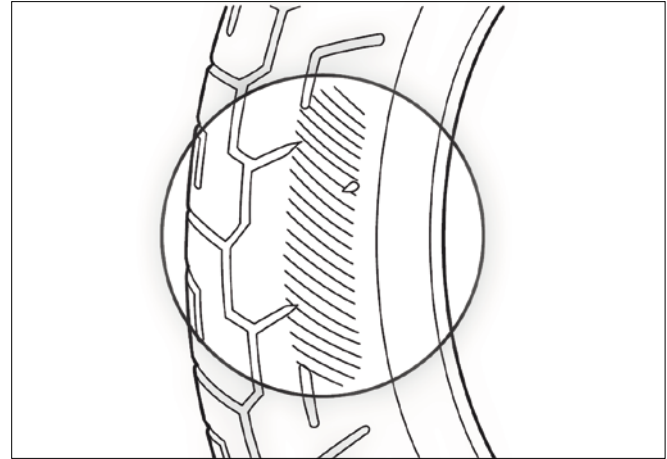


Measure the minimum thickness "A" of the tread at the point of maximum wear, which must never be less than the minimum thickness and in any case comply with the requirements of local legislation.

 **Minimum tread thickness: 1 mm (0.03 in).**

If this is not the case, the tires must be replaced immediately.

 **Driving with tires with less than the prescribed minimum tread depth can lead to an accident resulting in serious or fatal injury.**

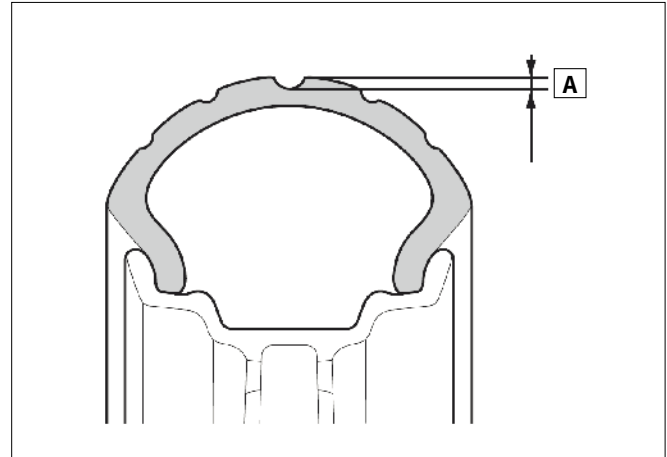

-  **Tire replacement, repair and maintenance must be carried out using appropriate tools and with the necessary experience. It is therefore recommended to contact an authorised Fantic Motor Center or a specialised tire dealer.**
-  **Use recommended tires or their equivalents with identical size, construction details and speed and load indices. The installation of incorrect tires on the vehicle can affect its control and stability, with the risk of causing an accident resulting in serious injury or death. Always use tires of the size and type recommended in this manual.**
-  **If the tires are new, they can be covered with a slippery film. Drive carefully for the first few kilometres/miles. Do not grease the tires with unsuitable liquid. If the tires are old, even if not completely worn out, they can harden and do not guarantee road holding, therefore replace them.**
-  **The tyres supplied are tubeless and are mounted on alloy wheels. Tubeless tyres must be installed on this type of rim without the use of an inner tube.**

ORDINARY MAINTENANCE OPERATIONS

COOLANT

i To find out the mileage and/or time interval for carrying out this check, refer to the "Verification operations to be carried out by the customer" section.

! Do not use the vehicle if the coolant level is below the minimum level.

Check the coolant level

! Check the coolant level with the engine cold, off and with the vehicle in vertical position.

Check that the coolant is between the "MAX" (maximum) and "MIN" (minimum) levels.


Refilling the coolant

If the coolant level is at or below the "MIN" (minimum) level, proceed as follows:

- Remove the cap from the coolant tank.
- Add coolant until the level is between 'MIN' (minimum) and 'MAX' (maximum).

! **Recommended product: Antifreeze liquid based on ethylene glycol with organic additives.**

! In the event of lack of antifreeze fluid, add distilled water (or plain water if there is none) and visit a Fantic Motor Authorised Center as soon as possible to have the coolant checked and replaced.

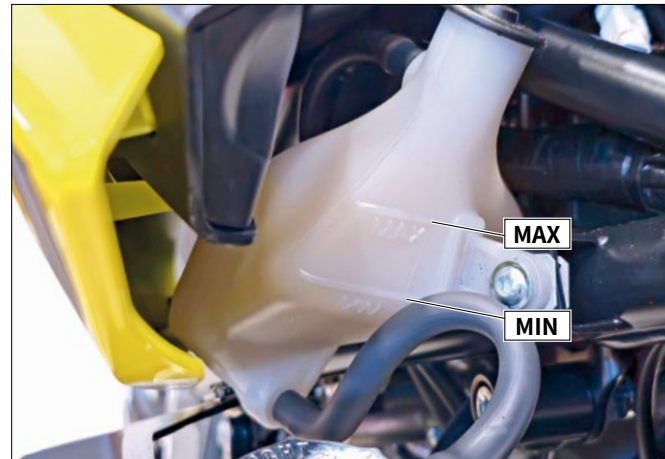

- Close cap.
- Start the vehicle and keep it running for at least one minute then check the level again.



To replace the coolant, contact an authorized Fantic Motor Service Center.



If the coolant level steadily decreases or the tank remains empty, there may be a significant leak in the system. Contact an authorised Fantic Motor Centre immediately.

ORDINARY MAINTENANCE OPERATIONS

BRAKING SYSTEM

- ❗ To find out the mileage and/or time interval for carrying out these checks, refer to the "Verification operations to be carried out by the customer" section.**

Check the front brake fluid level

To check the front brake fluid level, hold the vehicle in a vertical position and turn the handlebar, so that the liquid contained in the brake oil reservoir is parallel to the cap. Check that the liquid exceeds half the inspection window (minimum level).

- ❗ If the fluid level does not reach the minimum acceptable level, contact an authorised Fantic Motor Center.**

Check the rear brake fluid level

To check the rear brake fluid level, keep the vehicle in vertical position, so that the liquid contained in the brake oil reservoir is parallel to the cap. Check that the liquid is between the "MIN" (minimum) and "MAX" (maximum) marks.

- ❗ If the fluid level does not reach at least the "MIN" (minimum) mark, contact an authorised Fantic Motor Center.**

Brake system fluid top up

- ❗ To top up the brake fluid, do to an authorized Fantic Motor Service Centre.**



Pads wear check

- ⚠ If there is a reduction in the vehicle's braking capacity, carry out an inspection of the brake pads.
- i The disc brake pads wear depends on the use, the type of driving and the type of road.
- ⚠ Wear that goes beyond the limit of the friction material leads to contact of the pad metal shoe with the disk with consequent metallic noise and sparks flying from the calliper; braking efficiency, safety and completeness of the disk would be affected.

Front brake pads

Check the pads for wear through the opening between the half-callipers as follows:


With inspection groove

- Ensure that the wear-limit groove “A” is always visible.

Without inspection groove

- Check that the thickness of the friction material is not less than **2 mm (0.08 in)**.

In either case, replace both pads.

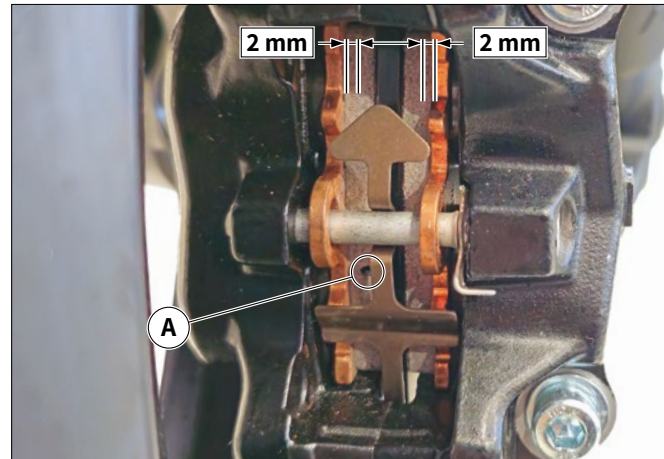

ORDINARY MAINTENANCE OPERATIONS

Rear brake pads

Check the pads for wear through the opening between the half-callipers as follows:


With inspection notch

- Ensure that the wear-limit notch “B” is always visible.

Without inspection notch

- Check that the thickness of the friction material is not less than **1 mm (0.04 in)**.

In both cases, replace both pads.

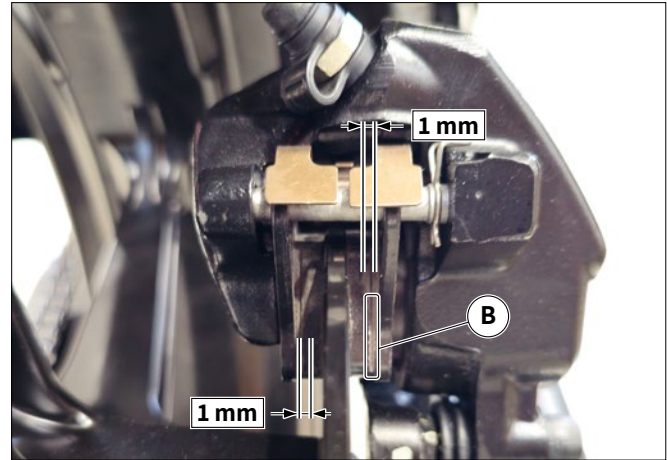

Braking System Check

Braking action at rest check:

- Check that there is no braking action when the brake lever and pedal are at rest.

Check no-load travel:

- Check that the lever and brake pedal travel is not excessive before encountering resistance.

Elasticity check:

- Check that the brake lever and pedal are not elastic during operation.



In the event of a negative outcome from these checks, it is recommended to contact an authorized Fantic Motor Center.

DRIVE CHAIN

- i** To find out the mileage and/or time interval for carrying out these checks, refer to the "Verification operations to be carried out by the customer" section.

Check the chain, sprocket and chainring wear

- i** It is recommended that these checks are carried out by an authorised Fantic Motor Center.

Perform the following checks:

Ensure that the wheel is not loose and that the axle "1", nut or adjusters are properly secured.

Check the wear condition of the chain "2", checking that there are no worn rollers and that the chain links are not:



- Dry.
- Rusty.
- Crushed.
- Seized (see example "B").

Also check the chain for missing sealing rings (see example "A").

Check the wear condition of the chain slide pads "3".

Check the wear condition of sprocket teeth "4" and chainring "5":

- Teeth in good condition (see example "C").
- Excessively worn teeth (see example "D").
- Damaged teeth (see example "E").

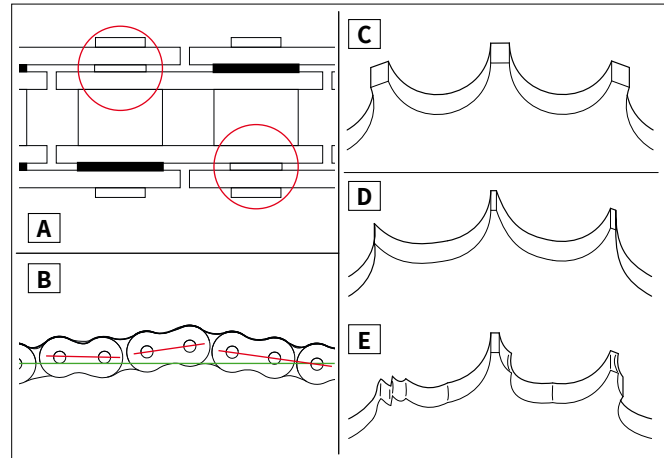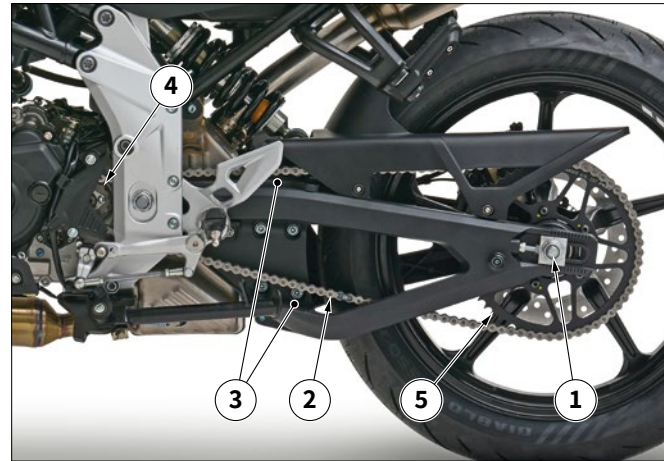

ORDINARY MAINTENANCE OPERATIONS

 If one or more of these components is damaged or excessively worn, contact an authorised Fantic Motor Center to request replacement of the entire chain assembly (sprocket, chain and chainring).

 Improper maintenance can cause premature chain wear and/or damage the sprocket and/or chainring.

Cleaning and lubrication


 The chain must always be kept well cleaned and lubricated especially after riding off-road sections with mud or sand.

 Do not clean the chain with water jets, steam jets, high-pressure jets, wire brushes and highly flammable solvents.

If the chain should become dirty, clean it using a dry cloth and neutral detergent. If necessary, use a soft brush. After cleaning, dry and lubricate with the recommended lubricant.


 If the right products are not available and if the user does not feel confident in cleaning and lubricating the chain, it is recommended to contact a Fantic Motor Authorised Centre.

 For recommended chain cleaning and lubrication products, refer to the "Recommended products table".

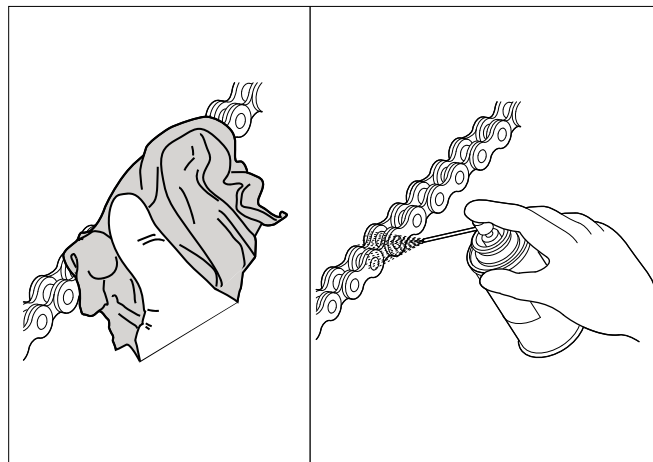

Chain clearance check

- ⚠ **Excessive loosening of the chain could make it lift off from the sprocket, causing accidents and serious damage to the vehicle.**
- ⚠ **For chain replacement or clearance adjustment, contact an authorized Fantic Motor Center only.**
- ⚠ **If there is excessive clearance in some positions, this indicates crushed or seized links. In this case, it is recommended to contact an Authorized Fantic Motor Center.**
- ⚠ **To prevent the risk of seizing, correct and regular lubrication of the chain is recommended.**

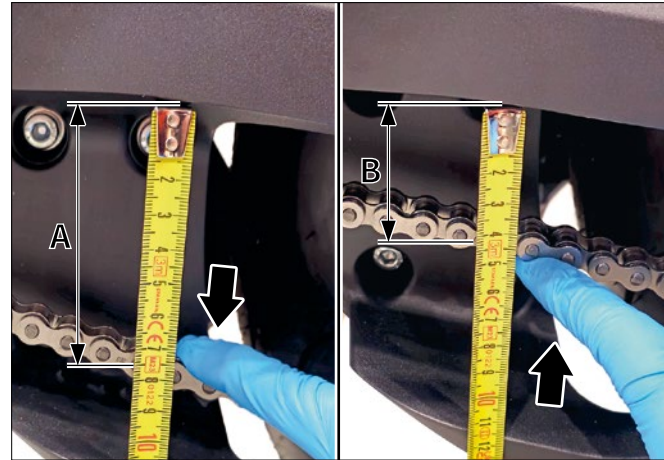

To check the chain clearance, follow the steps below:

- With the engine switched off, put the gearshift in neutral.
- Position the vehicle on a paddock stand.
- Rotate the rear wheel and, at the same time, press a finger (from bottom upwards) along the chain until you find the point where it is tightest.
- Then remove the kickstand and place the vehicle on the side kickstand, ensuring that it is not loaded.
- Pressing with a finger at the previously identified point of maximum tension, press the lower branch of the chain first downwards and then towards the other, measuring the distance from the edge of the swingarm.
- Check that the vertical oscillation, obtained as the difference between the highest value "A" and the lowest value "B", is between **30 mm (1.18 in)** and **35 mm (1.38 in)**.
- Check the vertical movement of the chain also in other positions of the rear wheel: the clearance must never exceed the stated limits.

ORDINARY MAINTENANCE OPERATIONS

CLUTCH LEVER CLEARANCE ADJUSTMENT

⚠ If you do not have the necessary technical knowledge to carry out this adjustment, it is recommended that you contact an authorised Fantic Motor Center to avoid damage to the vehicle and/or compromising driving safety.

⚠ The clutch lever clearance must comply with the value indicated by Fantic Motor in order to avoid malfunctions and permanent damage to the engine.

⚠ A lack of clutch lever clearance can cause permanent engine damage.

Upper adjustment

Perform the clutch lever clearance adjustment when the engine stops abnormally or the vehicle tends to move forward with the clutch lever and the gear engaged, or if the clutch "slips", causing an acceleration delay with respect to the engine rpm.


⚠ Carry out this adjustment only after checking that the engine is cold.

To make the adjustment:

- Remove protection cowl "A".
- Loosen the ring nut "B".
- Keep the handlebar straight when adjusting;
- Turn adjuster "C" to adjust the clutch lever clearance "D".

✂ **Clutch lever clearance ("D"): 10 mm (0.39 in).**

- Tighten the ring nut "B" keeping the adjuster "C" still.
- Reposition the protective cowl "A".

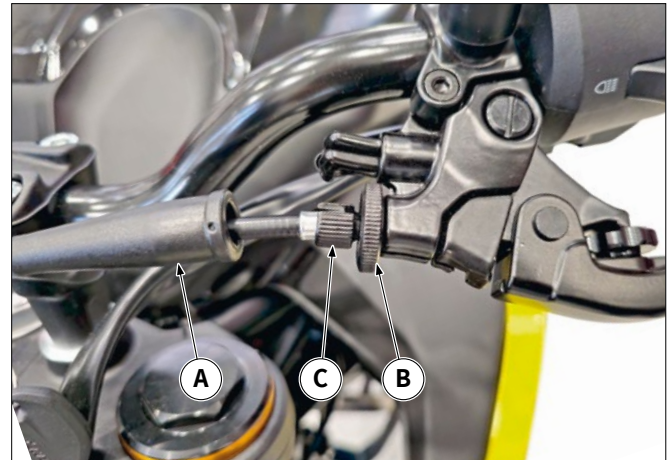

Lower adjustment


If the adjustment carried out at a higher level is not sufficient to guarantee the clearance required by Fantic Motor, it must be adjusted at a lower level.

⚠ Carry out this adjustment only after checking that the engine is cold.

To make the adjustment:

- Act on adjusters "E" of the clutch control lever, located on the engine crankcase.
- Check the clutch lever clearance "D".

🔧 Clutch lever clearance ("D"): 10 mm (0.39 in).

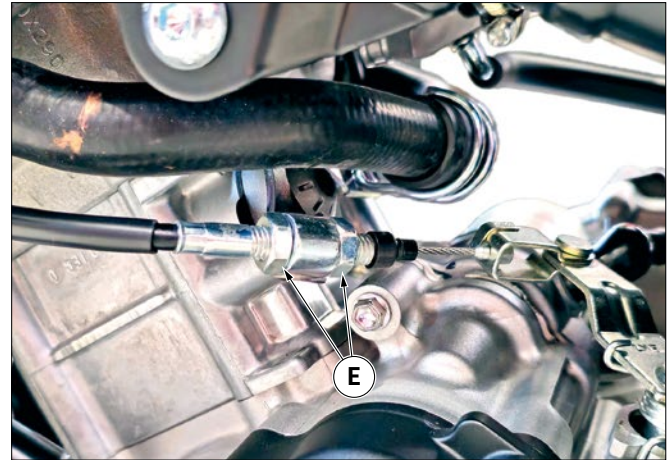

⚠ Check the integrity of the clutch cable in its entire length; the sheath must not show cracks, cuts, crushing or wear, if only one of these defects is present, replace the clutch cable at an authorized Fantic Motor Center.

⚠ If the adjustments made do not provide the required clearance, there is a risk of serious damage to the vehicle's engine and clutch. In this case, it is recommended to contact an authorised Fantic Motor Center.

ORDINARY MAINTENANCE OPERATIONS

TROUBLESHOOTING

The following table provides a series of steps to check the type of fault preventing the vehicle from operating correctly, or information on the fault displayed on the digital dashboard.

 **The information in this section may not cover all possible faults and errors.**

 **If the fault or anomaly detected is not among those listed, or if the procedure indicated does not resolve the problem, it is recommended to contact a Fantic Motor Authorized Center as soon as possible.**

 **If a fuse or relay needs to be replaced, please inform a Fantic Motor Authorized Center in any case, as the solution may not be definitive and related to a broader vehicle problem.**

Symptom	Possible cause	Procedure to be performed
The engine does not start.	“RUN/OFF” button in “OFF” position.	Check that the button position is correct.
	The side kickstand is not raised.	Check the side kickstand position.
	The front and/or rear brake is not applied correctly.	Check the correct procedure for starting the vehicle safely.
The engine does not start and an ignition attempt occurs.	The battery is partially or fully discharged, or needs to be replaced.	Recharge and/or replace the battery and contact an authorised Fantic Motor Center.
The engine does not start and not even an attempt to start it occurs.	The side kickstand is up, but the relevant sensor may not be functioning properly.	Do not use the vehicle, park it properly and contact an Authorized Fantic Motor Center.
	The starter motor is damaged and/or inoperative.	Do not use the vehicle, park it properly and contact an Authorized Fantic Motor Center.
The engine behaviour is not smooth. Presence of visible smoke coming out of the exhaust. Smell of pungent odours from the engine.	Poor and/or absent engine oil.	Check the engine oil level. Do not use the vehicle, park it properly and contact an Authorized Fantic Motor Center.
Engine indicator light on.	Engine and/or emission control system fault.	Do not use the vehicle, park it properly and contact an Authorized Fantic Motor Center.

ORDINARY MAINTENANCE OPERATIONS

EN

Symptom	Possible cause	Procedure to be performed
Increased braking distance. The braking pattern is smooth.	Worn pads and discs.	Check the wear condition of the brake pads and brake discs. Do not use the vehicle, park it properly and contact an Authorized Fantic Motor Center.
Significant increase in braking distance. The brake controls do not present a consistent resistance to pressure.	Low, absent or to be replaced brake fluid.	Check the brake fluid level. Do not use the vehicle, park it properly and contact an Authorized Fantic Motor Center.
Increased braking distance. The braking pattern is not smooth. ABS error indicator light not on.	ABS control unit malfunction.	Do not use the vehicle, park it properly and contact an Authorized Fantic Motor Center.
ABS error indicator light on.	Blown fuse(s).	Check and replace fuse.
	ABS control unit malfunction.	Do not use the vehicle, park it properly and contact an Authorized Fantic Motor Center.
Overheated engine.	Poor and/or absent coolant.	Check the coolant level.
Temperature indicator light on. The cooling fan does not work.	Blown fuse.	Check and replace fuse.
Non-functioning headlight.	Blown fuse.	Check and replace fuse.
Turn signals not working.	Blown fuse.	Check and replace fuse.
Horn not working.	Blown fuse.	Check and replace fuse.
Position lights not working.	Blown fuse.	Check and replace fuse.
Brake lights not working.	Blown fuse.	Check and replace fuse.

ORDINARY MAINTENANCE OPERATIONS

BATTERY

- i** To find out the mileage and/or time interval for carrying out this check, refer to the "Verification operations to be carried out by the customer" section.

The type of battery installed does not require maintenance. It is therefore not necessary to check the electrolyte level or top up with distilled water. Keep the battery terminals clean if they become dirty or corroded.



Battery removal

- !** If you are not sure about this operation, it is recommended that you contact an authorised Fantic Motor Center.

- !** If electrolyte (sulphuric acid) leaks from the battery, contact an authorised Fantic Motor Center.

- !** Keep sparks or open flames away from the battery.

Place the vehicle on the side kickstand.
Set the ignition switch to **(OFF)** and remove the key from the ignition switch.
Insert the key into the lock "A" located on the central side panel of the vehicle and turn it clockwise.
Lift up and remove the seat "B".

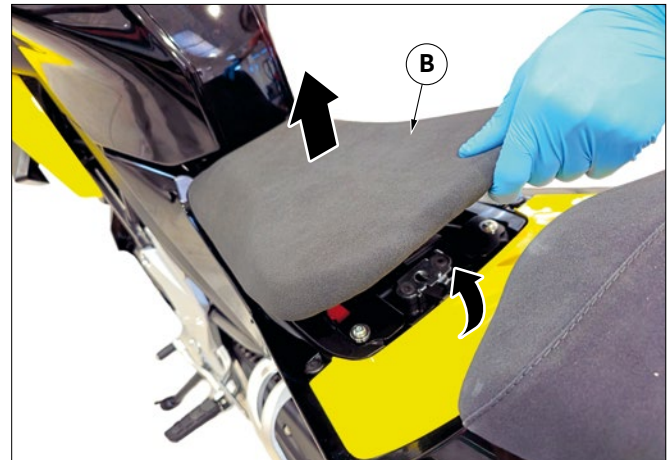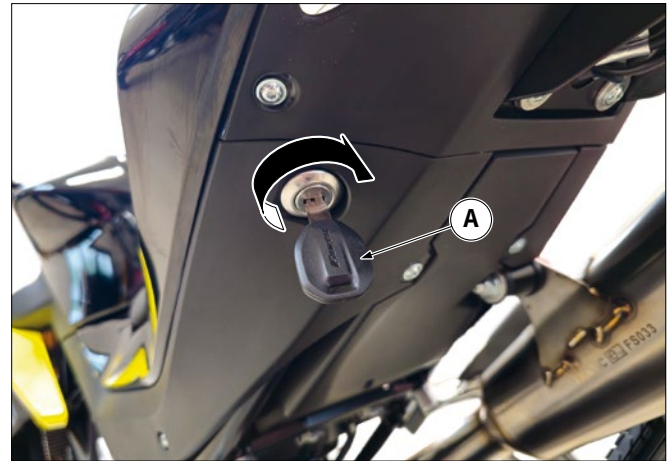

Remove the battery cover "C" by unscrewing the two screws "D".

Disconnect the negative (black) terminal "E" by removing its screw.

Disconnect the positive (red) terminal "F" by removing its screw.

Extract the battery "G" from the vehicle.

Battery terminals cleaning

! If you are not sure about this operation, it is recommended that you contact an authorised Fantic Motor Center.

i In the event of prolonged non-use of the vehicle, it is advisable to disconnect the battery terminals to prevent battery degradation.

If the "H" terminals begin to corrode and are coated with a whitish substance, they should be washed with warm water and cleaned. In case of heavy corrosion, clean and polish the terminals with a metal spatula or sandpaper, wearing protective goggles. These operations must be carried out with the battery removed from the vehicle.

Battery installation

Install components in the reverse order of removal.


Always connect the positive terminal first and then the negative terminal.

Before reassembling the seat make sure you have not left the key in the area under the seat.

Also check that the seat is properly secured before riding.

! Do not remove the protections and always install the battery respecting the polarities, protecting the terminals with vaseline grease.

! When installing a new battery, dispose of the spent battery at an authorised collection point, following local regulations, to ensure proper recycling and environmental protection.

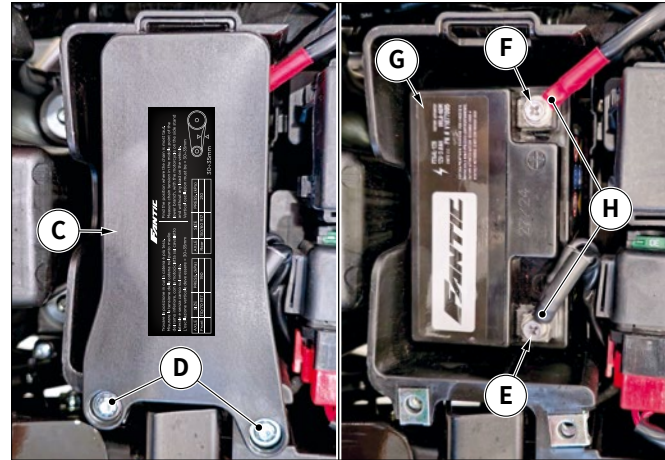

ORDINARY MAINTENANCE OPERATIONS

FUSES AND RELAYS



Fuses protect the vehicle's electrical circuits. If an electrical component of the vehicle stops working, check and replace the blown fuses, if any.

⚠ If a fuse frequently blows, there may be an electrical problem. It is therefore advisable to take the vehicle to an authorized Fantic Motor Centre for inspection.

⚠ Do not repair faulty fuses and never use a fuse of a different power rating than specified, it could cause a short circuit and consequently the risk of fire and related damage to the electrical system.

Fuses arrangement

- A. Main fuse (30 A)
- B. Fuse box
 - 1. ECU power supply fuse (5 A)
 - 2. Cooling fan fuse (7.5 A)
 - 3. Electronic injection system and emission control system fuse (10 A)
 - 4. ABS power supply fuse (30 A)
 - 5. Key tensioning fuse: ECU, ABS, dashboard, USB and starter relay (7.5 A)
 - 6. Lights power supply fuse (7.5 A)
 - 7. Dashboard power supply fuse (5 A)
- C. Main spare fuse (30 A)
- D. Reserve fuses (5 A, 7.5 A, 10 A)

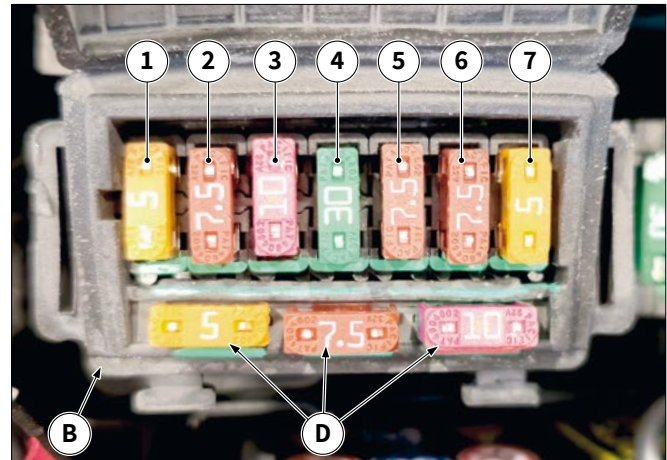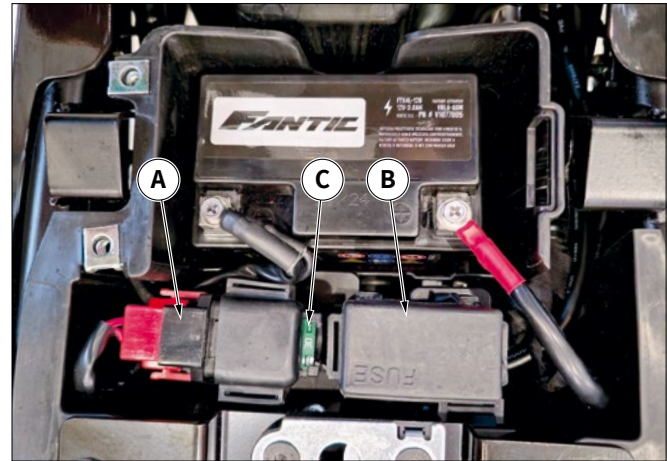

Fuse removal

⚠ If you are not sure about this operation, it is recommended that you contact an authorised Fantic Motor Center.

Set the ignition switch to (**OFF**) and remove the key from the ignition switch.


Remove the seat (see "Battery" section).

Remove the fuse box cover from the vehicle.

Remove one fuse at a time and check if the filament is broken.

Replace the fuse, if damaged, with a type of the same amperage.

Install the fuse box cover and the seat.

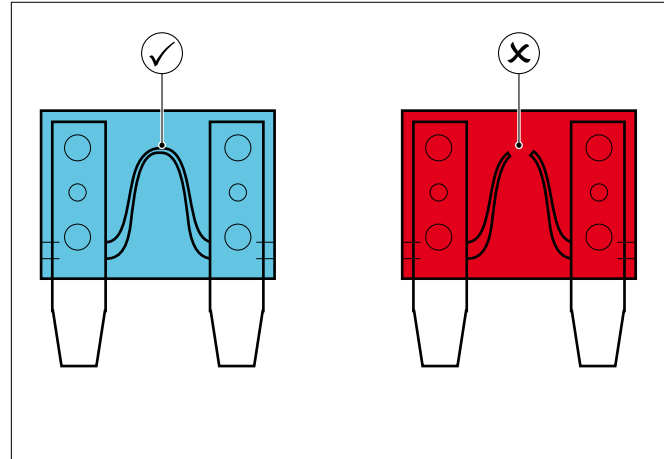

ORDINARY MAINTENANCE OPERATIONS

VEHICLE INACTIVITY

If the vehicle should remain inactive for months it is advisable to take some precautions:

- Empty the tank completely.
- Remove the battery and charge it with a suitable battery charger every two weeks.



The battery must be kept in a dry place and at a temperature between 5-35 °C (41-95 °F). Keep the battery out of reach of children.

- Position the vehicle with the tires raised off the ground using the appropriate supports and periodically check the tire pressure.
- Lubricate the chain.
- Cover the exhaust terminal with a well-tied bag to prevent moisture from entering inside.
- Cover the vehicle with an appropriate sheet (in breathable material) of a size sufficient to fully cover the vehicle.
- The vehicle must be placed in an unheated place with minimal temperature variations, free from humidity and protected from sunlight.

After the period of inactivity:

- Uncover and wash the vehicle.
- Check the battery status.
- Perform preliminary checks.



Take a test drive for a few kilometres (miles) at moderate speed in an area away from traffic.

VEHICLE WASHING

It is good that the vehicle is washed periodically to keep its components in good condition.

If the vehicle is used under the following conditions, more frequent washing is recommended:

- Areas where humidity and salinity of the atmosphere are higher than normal.
- Roads or areas where salt or de-icing chemicals are used.
- Roads or areas with the presence of industrial dust or tar stains.
- Sport use and off-road driving.
- Presence on the vehicle body of dead insects, bird excrement, etc.

It is advisable not to stop or park the vehicle under plants or trees. Certain plants or trees release residues, resins, fruits or leaves containing substances harmful to the vehicle components and bodywork.

 **Fantic Motor recommends using quality products to clean the vehicle. The use of unsuitable products can damage vehicle components. For cleaning, do not use solvents or cleaning products that contain alcohol or gasoline. Fantic Motor recommends the use of environmentally friendly neutral liquid soap.**

 **The use of high-pressure washing systems (or steam cleaners) can damage the seals, the oil seals, brake system, electrical system, dashboard and seat. Fantic Motor does not recommend the use of steam or pressure washing systems to clean the vehicle.**

 **Before washing the vehicle, switch off the ignition key and protect the rider and passenger seats with a suitable cover to prevent water penetration.**

ORDINARY MAINTENANCE OPERATIONS

Do not wash in the sun, especially in summer, with the body still warm, as if the detergent dries before rinsing it could cause damage to the paintwork.

Do not use liquids at temperatures above 40 °C (104 °F) to clean plastic components.

Do not direct air jets, steam or water at high pressure on:

- Rider seat.
- Passenger seat.
- Wheel hubs.
- Handlebars switches.
- Bearings.
- Brake oil master cylinder and tanks.
- Tools and indicators.
- Exhaust system fumes outlet hole.
- Steering lock.
- Fuel tank cap or similar.
- Headlight and tail light.
- Electrical components.
- Decals.

Use a jet of warm water at low pressure, rinse the vehicle thoroughly and in particular the dirtiest parts. With a soft sponge rub all parts of the vehicle.

Rinse the vehicle well and thoroughly using a low pressure jet. With a chamois leather cloth, proceed to dry the vehicle.

It is possible that after the wash the braking efficiency is reduced, it is therefore recommended to dry the discs well and wait for the pads to dry.

If the vehicle is started, proceed with caution and operate the brakes repeatedly.

Only after a scrupulous and thorough washing it is possible to proceed with the polishing phase with silicone waxes.



Do not use abrasive pastes on the vehicle, they could damage the painted parts.



Do not apply protective wax on the parts of the braking system, it could compromise their operation.




Do not pass wax on the seat, it could damage it and make it slippery, reducing the stability of the rider's and/or passenger's seat thus increasing the risk of accidents and/or damage to things and/or people.

RECOMMENDED PRODUCTS TABLE

i Use lubricating and fluid products that meet the equivalent specifications, or higher than those prescribed. These same indications are also valid for topping up.

EN

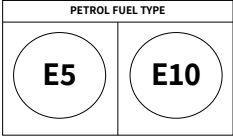Product	Characteristics	Remarks
4-stroke gearshift engine oil	SAE 10W40	Do not use mineral oils.
Grease for bearings, joints, articulations and linkage	Lithium grease	
Coolant	Antifreeze liquid based on ethylene glycol with organic additives	Do not dilute with water.
Fork oil	Fork oil gradation 7.5W	
Drive chain lubricant	Spray grease for drive chains with O-Ring	
Brake oil	Dot 4 brake fluid	
Cleaner for electrical contacts	Contact Cleaner	
Fuel	95 or 98 octane super lead-free petrol with 10 % maximum ethanol content	
Safety lock medium tightening	Medium threadlocker	
Safety lock strong tightening	Strong threadlocker	
Lubricant for bolts unlocking	Unlocking protective lubricant	
Anti-friction lubricant for screw tightening torques	Generic engine oil	
Lubricant for rubber oil seals and OR parts	Lithium soap grease	

ORDINARY MAINTENANCE OPERATIONS

Product	Characteristics	Remarks
Battery terminals	White vaseline grease	
Vehicle wash	Low pressure water at room temperature Ecological neutral liquid soap	Avoid aggressive detergents.
External cleaning of the brake system (brake plates and seats)	Disc Brake Spray Cleaner	Do not use to clean brake pads and plastic parts.

MAINTENANCE SCHEDULE

-  The maintenance schedule indicates all the operations required to maintain top performance in terms of safety and reliability, as well as proper emission control of your Fantic Motor vehicle.
-  Scheduled maintenance work (servicing) must be carried out according to the standards and specifications required by Fantic Motor.
-  Contact an authorised Fantic Motor Service Centre and you will find properly trained technicians and a workshop equipped with all the necessary requirements.
-  Compliance with and performance of all maintenance services listed in this schedule ensures that the vehicle is constantly serviced correctly and optimally.
-  Fantic Motor declines all civil and criminal liability for damage to the vehicle, property and/or persons due to maintenance operations performed by the user.
-  Carry out maintenance operations more frequently if the vehicle is used in rainy, dusty areas, rough roads or in the case of fast riding.
-  In the case of intensive and prolonged use or use of the vehicle in a harsh environment (dusty and sandy terrain), it is necessary to intensify vehicle checks and, if necessary, to carry out servicing earlier.
-  It is essential to make the first inspection and servicing by the end of the first year of use of the vehicle even if the deadline of 1000 km (600 mi) has not been reached.
-  Timely servicing is necessary for proper use of the warranty.

MAINTENANCE PLAN

SCHEDULED MAINTENANCE PLAN

- i** The following scheduled maintenance plan contains all the maintenance procedures planned and carried out at Fantic Motor authorised workshops.
- i** Scheduled servicing for this Fantic Motor vehicle is a regular service interval of one service every 3000 km or 1800 miles (with the exception of the first service at 1000 km or 600 miles, scheduled at the end of the running-in period).

Item	Operation	Frequency (x 1000 km / 600 mi)					Specific period	Specific distance
		1	3	6	9	12		
Fuel circuit	– Check that the fuel pipes are not cracked or damaged.			✓		✓	every year	
Mapping check	– Check that the engine control unit is updated to the latest version.	✓		✓		✓		
Air filter	– Clean.			✓				
	– Replace.					✓		
Spark plug	– Check its status. – Clean and restore the electrode distance.			✓				
	– Replace.					✓		
Valves	– Check the valve clearance. – Adjust if necessary.			✓		✓		
Engine oil	– Check the oil level and the absence of oil leaks in the vehicle.	–						every 500 km (300 mi)
	– Replace.	✓	✓	✓	✓	✓	every year	
Engine oil filter	– Replace.	✓	✓	✓	✓	✓	every year	
Cooling system	– Check the coolant level and verify the absence of any leaks in the vehicle.	✓		✓		✓	every year	
	– Coolant change.	–					every 3 years	
Clutch	– Check its operation. – Adjust if necessary.	✓		✓		✓		

Item	Operation	Frequency (x 1000 km / 600 mi)					Specific period	Specific distance
		1	3	6	9	12		
Drive chain	– Lubrication and cleaning. – Adjust if necessary.	–						every 500 km (300 mi)
	– Replace if necessary.	①					–	–
Battery	– Check the charge level.			✓		✓	every year	
Braking system	– Check the brakes operation.	✓		✓		✓	every year	
Brake fluid	– Check the level.	✓		✓		✓	every year	
	– Replace.	–					every 2 years	
Brake pads	– Check for wear. – Replace if necessary.	✓		✓		✓		
Brake discs	– Check for wear. – Replace if necessary.	✓		✓		✓		
Braking system pipes	– Check for cracks or damage. – Check that the installation and tightening are correct.	✓		✓		✓	every year	
Pivot pin for the brake pedal and gear shift pedal	– Lubricate with lithium soap based grease.	✓		✓		✓		
Throttle control	– Check its operation. – Check the grip clearance and adjust if necessary. – Lubricate the cable and throttle control body if necessary.	✓		✓		✓		
Clutch control	– Check its operation. – Check the clutch lever play and adjust if necessary. – Lubricate the cable and clutch lever body if necessary.	✓		✓		✓		
Clutch lever pivot pin	– Lubricate with lithium soap based grease.	✓		✓		✓		
Wheels and Tires	– Check the status and pressure.			✓		✓	every year	
Wheel bearings	– Check that the bearings are not loose or damaged.			✓		✓		

MAINTENANCE PLAN

Item	Operation	Frequency (x 1000 km / 600 mi)					Specific period	Specific distance
		1	3	6	9	12		
Handlebar bearings	– Check the bearing clearance and the handlebar hardness.			✓		✓		
	– Lubricate with lithium soap based grease.	–						every 24000 km (14000 mi)
Fork	– Check its operation and the absence of oil leaks.	✓		✓				
	– Replace oil.					✓		
	– Oil seals replacement.					✓		
Rear shock absorber	– Check its operation and the absence of oil leaks in the shock absorber.	✓		✓		✓	every year	
Rear suspension rotation points	– Lubricate the rotation points of the suspension with a non-washable anti-corrosion lubricant.	✓		✓		✓		
Passenger footboards	– Check its condition and lubricate if necessary.	✓		✓		✓	every year	
Side kickstand	– Check its operation. – Lubricate with lithium soap based grease.	✓		✓		✓	every year	
Side kickstand switch	– Check its operation.	✓		✓		✓		
Fastening elements and moving parts ②	– Check for correct movement and lubricate with lithium soap-based grease if necessary. – Check that there is no clearance and adjust if necessary (check tightening). – Check the wear condition and replace if necessary.	✓		✓		✓		

① Drive chain: replace only in the following cases:

- Worn and/or deformed chain.
- Difficulty or impossibility of adjusting the tension.
- Excessive elongation beyond the limit (more than 2% of the maximum permitted length).
- Lack of alignment between rim and sprocket.

② Fastening elements and moving parts: check the following components:

- Wheel fastening pins and nuts.
- Swingarm pin.
- Steering system fastening ring nuts and bearings.
- Handlebar fastening bolts and nuts.
- Front fork stanchions fastening screws.
- Front and rear brake calliper fastening bolts.
- Headlight fastening screws.
- Handlebar controls fastening screws.
- Rear-view mirrors fastening screws and nuts.
- Driver's and passenger's footboards fastening pins and bolts.

TECHNICAL DATA

Technical Data	
Maximum length	2020 mm (79.53 in)
Maximum width	800 mm (31.50 in)
Maximum height	1100 mm (43.31 in)
Wheel base	1355 mm (53.35 in)
Weight in running order with 90% fuel	138 kg (304.24 lb)
Maximum allowable weight (rider, passenger and baggage)	170 kg (374.79 lb)
Weight at full load (vehicle, rider, passenger and baggage)	310 kg (683.43 lb)
Seats	2
Engine type	4-stroke single cylinder
Number of cylinders	1
Total displacement	125 cc (7.62 cu in)
Bore/Stroke	58.7 mm (2.31 in)
Compression ratio	11.2:1
Starting type	Electric
N ° of engine revolutions at idle speed	1750 ± 150 rpm
Clutch	Oil-bath multi-disc with integrated anti-hopping system
Lubrication system	Casing in oil bath. Pressure system regulated by trochoid pump
Type of cooling	Liquid
Coolant	0.6 l (0.13 UK gal, 0.16 US gal)
Type of gearbox	6-speed mechanical Pedal control on the left side of the engine

Technical Data	
Transmission ratios	Primary transmission: 73/24 = 3.042
	1st gear ratio: 34/12 = 2.833
	2nd gear ratio: 30/16 = 1.875
	3rd gear ratio: 30/22 = 1.364
	4th gear ratio: 24/21 = 1.143
	5th gear ratio: 22/23 = 0.957
	6th gear ratio: 21/25 = 0.840
	Secondary transmission: 57/14
Drive chain	428 D.I.D. model 428VIX2 - 132 links
Air filter	Paper
Fuel	95-98 octane super lead-free petrol
Tank capacity (including reserve)	12.5 l (2.75 UK gal, 3.30 US gal)
Capacity of the fuel reserve only	2.8 l (0.62 UK gal, 0.74 US gal)
Engine oil	Quantity
	Total: 1.05 L (1.11 US qt) (0.92 Imp. qt)
	Without oil filter replacement: 0.85 L (0.90 US qt) (0.75 Imp. qt)
	With oil filter replacement: 0.95 L (1.00 US qt) (0.84 Imp. qt)
Fuel system	30mm single-body electronic injection, singlepoint single injector

TECHNICAL DATA

Technical Data		
Frame		Steel uprights bolted to forged aluminium plates
Swingarm		Aluminium swingarm with reinforced lower truss
Steering angle (with extended suspensions)		25°
Steering angle (both sides)		32.5° ± 1°
Front suspension		41 mm (1.61 in) upside-down fork Stroke 130 mm (5.12 in)
Rear suspension		Preload-adjustable mono-shock absorber Wheel stroke 130 mm (5.12 in)
Front brake	Type	ByBre 4-piston 28 mm (1.10 in) radial calliper 320 mm (12.60 in) floating disc Ø13 mm (0.51 in) pump with adjustable lever
	Minimum disk thickness	4.5 mm (0.18 in)
	Minimum pad thickness	2 mm (0.08 in)
Rear brake	Type	ByBre 34 mm (1.34 in) single-piston floating calliper 230 mm (9.06 in) disk Pump Ø13 mm (0.51 in)
	Minimum disk thickness	3.6 mm (0.14 in)
	Minimum pad thickness	1 mm (0.04 in)

Technical Data		
Rims	Type	5-spoke aluminium alloy wheels
	Measurement	Front: 3.00 x 17" Rear: 4.00 x 17"
Tires	Measurement	Front: 110/70 R17 Rear: 150/60 R17
	Inflation pressure	Front: 1.9 bar (190 kPa, 27.56 psi) Rear: 2.1 bar (210 kPa, 30.46 psi)
	Reference model	Pirelli Diablo Rosso IV
ABS system	ABS system on two independent channels which can be disconnected at the rear Cornering function (optional)	
Spark plug	NGK MR8E-9	
Battery	12 V - 3.2 Ah	
Fuses	Main fuse: 30 A Secondary fuses: 5 A (q.ty 2), 7.5 A (q.ty 3), 10 A (q.ty 1), 30 A (q.ty 1)	
Generator	14 V - 150 W at 5000 rpm	
Turn signals	LED	
High/low beam light	LED	
Position/brake light	LED	
License plate light	LED	

DECLARATION OF CONFORMITY

Declaration of conformity

EU Directive 2014/53/EU



Simplified EU conformity declaration:

Your vehicle is equipped with a range of radio equipment. The manufacturers of this radio equipment declare that these equipment complies with Directive 2014/53/EU where required by law. The complete text of the EU declaration of conformity is available at the following web address: www.Fantic.com/RED

Addresses of radio component manufacturers:

All radio components must carry the manufacturer's address according to the provisions of directive 2014/53/EU. For components that, due to their size or nature, cannot be furnished with a sticker, the respective manufacturers' addresses as required by law are listed in the table 2. Note Only skilled person can access and install the device.

TAB.1

RADIO DEVICE INSTALLED ON THE VEHICLE	FREQUENCY BAND	RADIO TRASMISSION MAX POWER
Digital dashboard		
Bluetooth®	2402-2480MHz	-2.63 dBm

TAB.2

RADIO DEVICE INSTALLED ON THE VEHICLE	IMPORTER
Digital dashboard	Chengdu Tianxing Automobile Parts Co., Ltd No. 333, Motor City Avenue, Economy and Technology Development Zone, LongquanChengdu, Sichuan, PRC.

EN

 **Note:**
Only skilled person can access and install the device.

